MP MASTER
MA20616

ROHDE&SCHWARZ

DOCUMENTATION

DOCUMENTATION

DOCUMENTATION

DOCUMENTATION

DOCUMENTATION

DOCUMENTATION

DOCUMENTATION

DOCUMENTATION

DOCUMENTATION

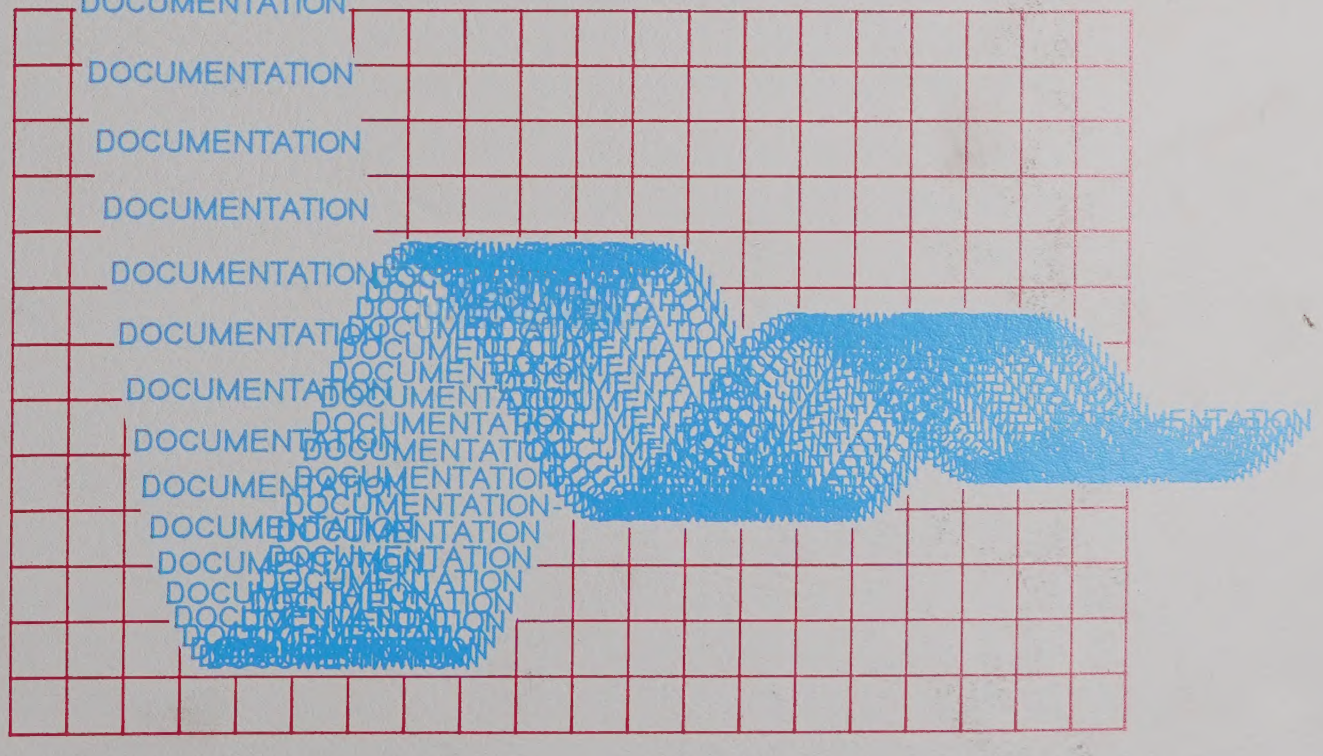

ROHDE&SCHWARZ

Lieferumfang / Parts supplied

Nachstehend aufgeführte Teile gehören zum Lieferumfang.
The items listed hereafter are included in the parts supplied.

Typ/Type
FSE-K21

Menge Quantity	Benennung Designation	Sachnummer Order Nr.:
	XX VARIANTENERKLAERUNG IDENTIFICATION OF MODELS VAR 02 = GRUNDAUSFUEHRUNG MOD 02 = BASIC MODEL	
	XX BEMERKUNG PLEASE NOTE EDGE-ERWEITERUNG ZU FSE-K21	
1	OS OPTIONSSCHILD	1106.4192.00
	PB BESCHREIBUNG FSE-K21D "JE NACH AUFTRAG"	
	PB MANUAL FSE-K21E "JE NACH AUFTRAG"	
	PB MANUAL FSE-K21 US "JE NACH AUFTRAG"	

OPTION INCL
E-K21 1106.4186.02
SER.: 837592010
NO.: 271333458

Datum	Äl	Lieferumfang	Seite
05.01	02	1106.4186.02	1-

ROHDE&SCHWARZ

Test and Measurement
Division

Software Manual

EDGE Base Station Tests

Application Firmware Extension

FSE-K21

1106.4186.02

Printed in the Federal
Republic of Germany

Digitized by the Internet Archive
in 2025

https://archive.org/details/manualsplus_05987

Certified Quality System

ISO 9001

DQS REG. NO 1954-04

Qualitätszertifikat

Sehr geehrter Kunde,

Sie haben sich für den Kauf eines Rohde & Schwarz-Produktes entschieden. Hiermit erhalten Sie ein nach modernsten Fertigungsmethoden hergestelltes Produkt. Es wurde nach den Regeln unseres Qualitätsmanagementsystems entwickelt, gefertigt und geprüft. Das Rohde & Schwarz-Qualitätsmanagementsystem ist nach ISO 9001 zertifiziert.

Certificate of quality

Dear Customer,

You have decided to buy a Rohde & Schwarz product. You are thus assured of receiving a product that is manufactured using the most modern methods available. This product was developed, manufactured and tested in compliance with our quality management system standards.
The Rohde & Schwarz quality management system is certified according to ISO 9001.

Certificat de qualité

Cher client,

Vous avez choisi d'acheter un produit Rohde & Schwarz. Vous disposez donc d'un produit fabriqué d'après les méthodes les plus avancées. Le développement, la fabrication et les tests respectent nos normes de gestion qualité.
Le système de gestion qualité de Rohde & Schwarz a été homologué conformément à la norme ISO 9001.

ROHDE&SCHWARZ

Certified Quality System

ISO 9001

Adressen/Addresses

FIRMENSITZ/HEADQUARTERS

Telefon/Phone
Telefax
E-mail

ROHDE & SCHWARZ GmbH & Co. KG
Mühldorfstraße 15 · 81671 München — +49 89 41 29- 0
Postfach 801469 · 81614 München — +49 89 41 29- 12164
Internet: www.rohde-schwarz.com — –

WERKE/PLANTS

ROHDE & SCHWARZ Messgerätebau GmbH — +49 83 31 10 8-0
Riedbachstraße 58 · 87700 Memmingen — +49 83 31 10 81 124
Postfach 16 52 · 87686 Memmingen — –

ROHDE & SCHWARZ GmbH & Co. KG
Werk Teisnach — +49 99 23 8 57-0
Kaikenrieder Straße 27 · 94244 Teisnach — +49 99 23 8 571-1 74
Postfach 11 49 · 94240 Teisnach — –

ROHDE & SCHWARZ GmbH & Co. KG · Werk Köln — +49 22 03 49-0
Graf-Zeppelin-Straße 18 · 51147 Köln — +49 22 03 49-51 3 08
Postfach 98 02 60 · 51130 Köln — –

TOCHTERUNTERNEHMEN/SUBSIDIARIES

ROHDE & SCHWARZ Vertriebs-GmbH — +49 89 4129-120 07
Mühldorfstraße 15 · 81671 München — +49 89 4129-135 67
Postfach 801469 · 81614 München — customersupport@rohde-schwarz.com

ROHDE & SCHWARZ International GmbH — +49 89 4129-120 05
Mühldorfstraße 15 · 81671 München — +49 89 4129-135 97
Postfach 80 14 60 · 81614 München — –

ROHDE & SCHWARZ Engineering and Sales GmbH — +49 89 4129-137 11
Mühldorfstraße 15 · 81671 München — +49 89 4129-137 23
Postfach 80 14 29 · 81614 München — –

R&S BICK Mobilfunk GmbH — +49 50 42 9 98-0
Im Landerfeld 7 · 31848 Bad Münder — +49 50 42 9 98-105
Postfach 20 62 · 31844 Bad Münder — rsbick@rsbick.rohde-schwarz.com

ROHDE & SCHWARZ FTK GmbH — +49 30 6 58 91-122
Wendenschloßstraße 168, Haus 28 — +49 30 65 550-221
12557 Berlin — –

SIT Gesellschaft für Systeme
der Informationstechnik mbH — +49 30 6 58 84-2 22
Wendenschloßstraße 168, Haus 28 — +49 30 6 58 84-1 83
12557 Berlin — sit.info@sit.rohde-schwarz.com

Zweigniederlassungen der Rohde & Schwarz Vertriebs-GmbH/Branch offices of Rohde & Schwarz Vertriebs-GmbH

Zweigniederlassung Berlin — (+49 30) 34 79 48-0
Ernst-Reuter-Platz 10 · 10587 Berlin — (+49 30) 34 79 48-48
Postfach 100620 · 10566 Berlin — customersupport@rohde-schwarz.com

Zweigniederlassung Büro Bonn — (+49 2 28) 918 90-0
Josef-Wirmer-Straße 1–3 · 53123 Bonn — (+49 2 28) 25 50 87
Postfach 140264 · 53057 Bonn — customersupport@rohde-schwarz.com

Zweigniederlassung Hamburg — (+49 40) 63 29 00-0
Steilshooper Allee 47 · 22309 Hamburg — (+49 40) 630 78 70
Postfach 602240 · 22232 Hamburg — customersupport@rohde-schwarz.com

Zweigniederlassung Köln — (+49 22 03) 807-0
Graf-Zeppelin-Straße 18 · 51147 Köln — (+49 22 03) 807-50
Postfach 900149 · 51111 Köln — customersupport@rohde-schwarz.com

Zweigniederlassung Mitte — (+49 61 02) 20 07-0
Siemensstraße 20 — (+49 61 02) 80 00 40
63263 Neu-Isenburg — customersupport@rohde-schwarz.com

Zweigniederlassung München — (+49 89) 41 86 95-0
Mühldorfstraße 15 · 81671 München — (+49 89) 40 47 64
Postfach 801449 · 81614 München — customersupport@rohde-schwarz.com

Zweigniederlassung Nürnberg — (+49 9 11) 64203-0
Donaustraße 36 — (+49 9 11) 64203-33
90451 Nürnberg — customersupport@rohde-schwarz.com

Zweigniederlassung Telekommunikation — (+49 61 02) 20 07-0
Siemensstraße 20 — (+49 61 02) 20 07-12
63263 Neu-Isenburg — customersupport@rohde-schwarz.com

ADRESSEN WELTWEIT/ADDRESSES WORLDWIDE

Algeria
ROHDE & SCHWARZ Bureau d'Alger — (2) 59 24 53
5 B, Place de Laperrine — (2) 69 46 08
16035 Hydra-Alger — –

Argentina
Precisión Electrónica SRL — (14) 331 16 85
Av. Julio A. Roca 710 - Piso 6 — (14) 334 51 11
1067 Buenos Aires — preelctr@satlink.com

Australia
ROHDE & SCHWARZ — Sales (2) 8845 4100
(AUSTRALIA) Pty. Ltd. — (2) 9738 3988
Unit 6, 2-8 South Street — Service (2) 8845 4188
Rydalmere, N.S.W. 2116 — (2) 9638 0832
sales@rsaus.rohde-schwarz.com
service@rsaus. rohde-schwarz.com

Austria
ROHDE & SCHWARZ-ÖSTERREICH — (1) 6 02 61 41
Ges. m. b. H. — (1) 6 02 61 41-14
Sonnleithnergasse 20 — office@rsoe.rohde-schwarz.com
1100 Wien

Azerbaijan
ROHDE & SCHWARZ Azerbaijan — 12 93 31 38
Liaison Office Baku — 12 93 03 14
Azerbaijan Avenue 35 — –
370139 Baku

Baltic Countries
siehe/see Denmark

Bangladesh
Business International Ltd. — (2) 881 06 53
Corporation Office — (2) 882 82 91
House No: 95/A, Block -'F' — –
Road No: 4, Banani
Dhaka - 1213

Belgium
ROHDE & SCHWARZ BELGIUM N.V. — (2) 7 21 50 02
Excelsiorlaan 31 Bus 1 — (2) 7 25 09 36
1930 Zaventem — info@rsb.rohde-schwarz.com

Bolivia
siehe auch/see also Argentina

RIBCO LTDA. — (2) 32 84 03
Av. Mariscal Santa Cruz 1392 — (2) 39 30 47
Ed. Cámara Nacional — gibatta@caoba.entelnet.bo
de Comercio
Piso 10, Of.1010-1011
La Paz

Brazil
ROHDE & SCHWARZ DO BRASIL LTDA.
Av. Alfredo Egidio de — (11) 56 41 12 00
Souza Aranha, 177 — (11) 56 41 78 10
1° andar - Santo Amaro
04726-170 São Paulo- SP

Adressen/Addresses

Brunei
GKL Equipment PTE. Ltd. 276 06 26
#11-01 BP Tower 276 06 29
396, Alexandra Road gkleqpt@signet.com.sg
Singapore 119954
Republic of Singapore

Bulgaria
ROHDE & SCHWARZ (2) 963 43 34
Representation Office Bulgaria (2) 963 21 97
39, Fridtjof Nansen Blvd. rohdebg@rsoe.com
1000 Sofia

Canada
Kommunikationstechnik/Communications Equipment:
ROHDE & SCHWARZ CANADA Inc. (613) 592 80 00
555 March Rd. (613) 592 80 09
Kanata, Ontario K2K 2M5 –

Messtechnik/T & M Equipment:
TEKTRONIX CANADA, Inc. (416) 747 50 00
3280 Langstaff Road, Unit 1 (905) 760 72 41
Concord, Ontario L4K 5B6 –

Chile
DYMEQ Ltda. (2) 277 50 50
Avenida Larraín 6666 (2) 227 87 75
Santiago dymeq@entelchile.net

China
ROHDE & SCHWARZ (10) 64 31 28 28
Representative Office Beijing (10) 64 37 98 88
Parkview Center, Room 602 –
No. 2 Jiangtai Road,
Chao Yang District
Beijing 100016, P. R. China

Colombia
Ferrostaal de Colombia (1) 415 77 00
Av. Eldorado Nro. 97-03 Interior 2 (1) 413 18 06
Santafé de Bogotá, D.C. mc_fsc@multiphone.net.co

Costa Rica
siehe/see Mexico (EPSA)

Croatia
siehe/see Austria

Republic of Cyprus
HINIS TELECAST LTD. (4) 42 51 78
Agiou Thoma 18 (4) 42 46 21
Kiti
Larnaca 7550

Czech Republic
ROHDE & SCHWARZ – Praha, s.r.o. (2) 24 32 20 14
Pod Kastany 3 (2) 24 31 70 43
160 00 Praha 6 rohdecz@rsoe.com

Denmark
ROHDE & SCHWARZ DANMARK A/S 43 43 66 99
Ejby Industrivej 40 43 43 77 44
2600 Glostrup RSDK@post1.tele.dk

Ecuador
REPRESENTACIONES (2) 25 22 51
MANFRED WEINZIERL (2) 25 22 51
Guanguiltagua 72 (39-93) mweinzierl@accessinter.net
Urbanización Jardines del Batán
Quito

Egypt
U.A.S. Universal Advanced Systems (202) 455 67 44
31 Manshiet El Bakry St., Heliopolis (202) 256 17 40
11341 Cairo uas@intouch.com

El Salvador
siehe/see Mexico (EPSA)

Estonia
ROHDE & SCHWARZ DANMARK A/S (6) 14 31 20
Estonian Branch Office (6) 14 31 21
Narva mnt. 13
10151 Tallinn

Finland
Orbis Oy (9) 47 88 30
P.O. B. 15 (9) 53 16 04
00421 Helsinki info@orbis.fi

France
ROHDE & SCHWARZ FRANCE (1) 41 36 10 00
Immeuble "Le Newton" (1) 41 36 11 10
9-11, rue Jeanne Braconnier –
92366 Meudon-la-Forêt Cédex

Niederlassung/Subsidiary Rennes:
ROHDE & SCHWARZ FRANCE (2) 99 51 97 00
Sigma 1 (2) 99 41 91 31
Rue du Bignon –
35135 Chantepie

Niederlassung/Subsidiary Toulouse:
ROHDE & SCHWARZ FRANCE (5) 61 39 10 69
Technoparc 3 (5) 61 39 99 10
B.P.501 –
31674 Labège Cédex
Büros/Offices:
Aix-en-Provence (4) 94 07 39 94
(4) 94 07 55 11
Lyon (4) 78 29 88 10
(4) 78 29 94 71
Nancy (3) 83 54 51 29
(3) 83 55 39 51

Ghana
KOP Engineering Ltd. (21) 77 99 13
P.O. Box 11012 (21) 22 47 69
3rd Floor Akai House, Osu
Accra

Greece
MERCURY SA. (1) 722 92 13
6, Loukianou Str. (1) 721 51 98
10675 Athens mercury@hol.gr

Guatemala
siehe/see Mexico (EPSA)

Honduras
siehe/see Mexico (EPSA)

Hong Kong
Schmidt & Co. (HK) Ltd. 25 07 03 33
9/F North Somerset House 28 27 56 56
Taikoo Place frankwong@shk.schmidtgroup.com
979 King's Road
Quarry Bay, Hong Kong

Hungary
ROHDE & SCHWARZ (1) 203 02 82
Budapesti Iroda (1) 203 02 82
Etele ut. 68 rohdehu@rsoe.com
1115 Budapest

Iceland
siehe/see Denmark

India
ROHDE & SCHWARZ (11) 683 74 84
India Pvt. Ltd.
244, Okhla Industrial Estate rsindiad@vsnl.com
Phase - III
New Delhi 110 020

Indonesia
P.T. REKANUSA SOLUSI (21) 576 16 02
Menara Rajawali, (21) 576 16 04
24th floor –
Jl Mega Kuningan Lot # 5.1
Kawasan Mega Kuningan
Jakarta 12950

Iran
ROHDE & SCHWARZ IRAN (21) 8 73 02 82
Liaison Office - Reg. N° RFC 1947 (21) 8 73 02 83
Dr. Beheschty Ave., Pakistan Ave., –
12th Street N° 1
Tehran 15317

Ireland siehe/see Great Britain

Italy
ROHDE & SCHWARZ ITALIA S.p.a. (6) 41 59 81
Via Tiburtina 1182 (6) 41 59 82 70
00156 Roma –

Centro Direzionale Lombardo (2) 95 70 41
Via Roma 108 (2) 95 30 27 72
20060 Cassina de´ Pecchi (MI)

Japan
ADVANTEST Corporation (3) 33 42 75 53
RS Sales Department (3) 53 22 72 70
Shinjuku-NS Building, 4-1 yoshimu@inst.advantest.co.jp
Nishi-Shinjuku
Tokyo 163-08, Japan

Jordan
Middle East Development (6) 465 96 71
c/o Jordan Crown Engineering & Trading Co. (6) 465 96 72
P.O. Box 830414
Amman, 11183

Kazakhstan
ROHDE & SCHWARZ Kazakhstan 32 72 63 55 55
Liaison Office Almaty 32 72 63 46 33
Pl. Respubliki 15 –
480013 Almaty

Kenya
Excel Enterprises Limited (2) 55 80 88
Dunga Road (2) 54 46 79
P.O. Box 42 788
Nairobi

Korea
Hana Technica Corp. (2) 514 45 46
Seoul Kangnam, P.O. Box 1458 (2) 514 45 49
Young Dong Bldg. 4F hanateco@unitel.co.kr
63-16 Nonhyun-Dong, Kang Nam-Ku
Seoul

Kuwait
Group Five Trading & Contracting Co. 244 91 72
P.O. Box 26645 244 95 28
Safat 13127
State of Kuwait

Latvia
Rohde & Schwarz Danmark A/S (7) 50 23 55
Latvian Branch Office (7) 50 23 60
Merkela iela 21-301 rsdk@rsdk.rohde-schwarz.com
1050 Riga

Lebanon
Rohde & Schwarz International (1) 465 64 28 Ext. 303
Liaison Office Riyadh (1) 465 64 28 Ext. 229
PO Box 361
c/o Haji Abdullah Alireza & Co.
Riyadh 11411 – KSA

Liechtenstein siehe/see Switzerland

Lithuania
Rohde & Schwarz Danmark A/S 222 46 62
Lithuanian Office 222 46 62
Lukiskiu 5-228
2600 Vilnius

Luxembourg siehe/see Belgium

Malaysia
DAGANG TEKNIK SDN. BHD. (3) 7035503/7035568
No. 9, Jalan SS 4D/2 (3) 7 03 34 39
Taman People´s Park danik@tm.net.my
47301 Petaling Jaya
Selangor Darul Ehsan

Malta
ITEC – International Technology Ltd. 37 43 00
B'Kara Road 37 43 53
San Gwann itec@keyworld.net

Mexico
Vertrieb Kommunikationstechnik/
Sales of Communications Equipment:
ELECTROINGENIERIA de Precisión (5) 559 76 77
S.A. (EPSA) (5) 575 33 81
Uxmal 520 epsa@compuserve.com
Colonia Vertiz Narvarte
03600 Mexico DF

Vertrieb Messtechnik/Sales of T&M Equipment:
Tektronix S.A. de C.V. (5) 666 63 33
Periférico Sur 5000, 8° Piso (5) 666 63 36
Col. Insurgentes Cuicuilco
Del. Coyoacán
04530 Mexico, D.F.

Nepal
Abishek Trade Links (P) Ltd. (1) 25 69 30
P.O.B. 9700 (1) 24 25 73
Kathmandu Durbar@hotel.mos.com.np

Netherlands
ROHDE & SCHWARZ (30) 600 17 00
NEDERLAND B.V. (30) 600 17 99
Perkinsbaan 1 Rob.DenHartog@rsn.rohde-schwarz.com
3439 ND Nieuwegein

New Zealand
Nichecom (4) 232 32 33
Level 1 Tawa Plaza (4) 232 32 30
210 Main Rd / P.O.B. 56-045 ISDN (4) 237 30 10
Tawa, Wellington robin.hodgson@nichecom.co.nz

Nicaragua siehe/see Mexico (EPSA)

Nigeria
Ferrostaal (Nigeria) Ltd. (1) 262 00 60
27/29 Adeyemo Alkaija Street (1) 262 00 64
P.O. Box 72021
Victoria Island
Lagos

Norway
ROHDE & SCHWARZ NORGE 23 17 22 50
Østensjøveien 36, P.O.B. 103 BRYN 23 17 22 69
0611 Oslo –

Oman
T&M Equipment and Broadcasting:
Mustafa & Jawad Science & Industry Co. Ltd. 60 20 09
P.O. Box 3340 60 70 66
Post Code 112
Ruwi
Sultanate of Oman

Pakistan
TelcoNet Communications & (51) 26 30 72
Engineering (51) 26 32 11
213/D, Ordnance Road tnc@meganet.com.pk
Rawalpindi-Pakistan-46000

Panama siehe auch/see also Mexico (EPSA)

ELECTRONICO BALBOA S.A. 614 93 64
Av. El Paical, Edif. El Dorado 236 18 20
Urb. Los Angeles pdubois@ebsa.com
Panama City

Papua-New Guinea siehe/see Australia

Peru siehe auch/see also Argentina

BMP INGENIEROS S.A. (1) 225 40 30
Av. José Gálvez Barrenechea 645 (1) 475 15 13
Urb. Corpac - San Borja wmelgarejo@bmp.com.pe
Lima 41

Philippines
MARCOM Industrial Equipment, Inc. (2) 8 13 29 31
MCC P.O.Box 2307 (2) 8 17 05 07
6-L Mezzanine Suite, Vernida I
Condominium120 Amorsolo St.
Legaspi Village
Makati City/Philippines 3117

Poland
ROHDE & SCHWARZ (22) 860 64 90
Oddzial w Polsce (22) 860 64 99
ul. Stawki 2, Pietro 28 rohdepl@rsoe.com
00-193 Warszawa

Portugal
TELERUS
Sistemas de Telecomunicações, S.A. (21) 412 35 90
Rua General Ferreira Martins, Lote 6,2.°B (21) 412 36 00
1495 Algés telerus@mail.telepac.pt

Romania
ROHDE & SCHWARZ (1) 410 68 46
Representation Office Bucharest (1) 411 20 13
Uranus 98 rohdero@rsoe.com
Bloc U8, scara 2, etaj 5, ap. 36
76102 Bucuresti

Russian Federation
ROHDE & SCHWARZ (095) 234 49 62
Representative Office Moscow (095) 234 49 63
Kazachy per. 7 rohderus@rsoe.com
109017 Moscow

Saudi Arabia
Rohde & Schwarz Liaison Office
c/o Haji Abdullah Alireza Co. Ltd. (1) 465 64 28
P.O.B. 361 (1) 465 07 82
Riyadh 11411 –

Singapore
Vertrieb/Sales:
INFOTEL TECHNOLOGIES LTD. 287 68 22
19 Tai Seng Drive 284 95 55
Kinergy Building # 06-00 general@infotel.com.sg
Singapore 535222

Service:
Rohde & Schwarz
Support Centre Asia Pte. Ltd. 846 37 10
1 Kaki Bukit View 846 00 29
#04-05/07 Techview rssca@mbox4.singnet.com.sg
Singapore 415941

Slovak Republic
Specialne systemy a software, a.s. (7) 65 42 25 29
Svrcic ul (7) 65 42 07 68
84104 Bratislava 3s@internet.sk

Slovenia
ROHDE & SCHWARZ (61) 123 46 51
Representation Ljubljana (61) 123 46 11
Koprska 92 rohdesi@rsoe.com
1000 Ljubljana

South Africa
Protea Data Systems (Pty) Ltd (11) 786 36 47
Communications & Measurement (11) 786 58 91
Division Colin.Forbes@protea.co.za
Private Bag X19
Bramley 2018

Spain
ROHDE & SCHWARZ ESPAÑA (91) 334 10 70
Salcedo, 11 (91) 729 05 06
28034 Madrid rema@rsd.rohde-schwarz.com

Sri Lanka
LANKA AVIONICS (1) 95 66 78
658/1/1, Negombo Road (1) 95 83 11
Matumagala –
Ragama

Sudan
SolarMan Co. Ltd. (11) 47 31 08
P.O. Box 11 545 (11) 78 17 25
Karthoum

Sweden
ROHDE & SCHWARZ SVERIGE AB (8) 605 19 00
Flygfältsgatan 15 (8) 605 19 80
12830 Skarpnäck info@rss.rohde-schwarz.com

Switzerland
Roschi Rohde & Schwarz AG (31) 922 15 22
Papiermühlestrasse 145, Postfach (31) 921 81 01
3063 Ittigen –

Syria
Electro Scientific Office (11) 231 59 74
Baghdad Street (11) 231 88 75
Dawara Clinical Lab. Building –
P.O.B. 8162
Damascus

Tanzania
Security Systems (T) Ltd. (22) 2 76 00 37
P.O. Box 7512 (22) 276 02 93
Dar Es Salaam

Taiwan
Lancer Communication Co., LTD. (2) 23 91 10 02
16F, No. 30, Pei-Ping East Road (2) 23 95 82 83
Taipei rosa.ho@lancercomm.com.tw

Thailand
Vertrieb Kommunikationstechnik/Sales Communications Equipment:
TPP Operation Co., Ltd. (2) 880 93 45
41/5 MoobanTarinee Boromrajchonnee Rd. (2) 880 93 47
Talingchan, Bangkok 10170 –

Vertrieb Messtechnik/Sales T & M Equipment:
Schmidt Scientific (Thailand) Ltd. (2) 643 13 30-9
212 Government Housing Bank Bldg. (2) 643 13 40
Tower II, 19th Floor, Rama 9 Rd.,
Huaykwang, Bangkapi, Bangkok 10320 –

Turkey
ROHDE & SCHWARZ (216) 385 19 17
Liaison Office Istanbul (216) 385 19 18
Bagdad Cad. 191/3, Ard. rsturk@superonline.com
81030 Selamicesme-Istanbul

Ukraine
ROHDE & SCHWARZ (044) 268 60 55
Representative Office Kiev (044) 268 83 64
ul. Patrisa Loumoumba, 4 rohdeukr@rsoe.com
252042 Kiev

United Arab Emirates
Service-Center für den Mittleren Osten/
Service Center for the Middle East:
ROHDE & SCHWARZ Emirates L.L.C. (2) 631 20 40
P.O.B. 31156 (2) 631 30 40
Abu Dhabi –

ROHDE & SCHWARZ (2) 63 35 670
Liaison Office Middle East (2) 63 35 671
P.O. Box 311 56
Abu Dhabi –

Vertrieb/Sales:
ROHDE & SCHWARZ Liaison Office Dubai (4) 39 44 829
P.O.B. 53726 (4) 39 44 794
Dubai –

R&S BICK Mobile Communication
P.O.B. 17466 (4) 81 36 75
JAFZ, LOB 04-028 (4) 81 36 76
Dubai –

United Kingdom
ROHDE & SCHWARZ UK Ltd. (12 52) 81 13 77
Ancells Business Park (12 52) 81 14 47
Fleet, Hampshire GU 13 8UZ –

Uruguay
siehe auch/see also Argentina

	AEROMARINE S.A. Cerro Largo 1497 11200 Montevideo	(2) 400 39 62 (2) 401 85 97 aeromar@adinet.com.uy
USA	Kommunikationstechnik/Communications Equipment: ROHDE & SCHWARZ, Inc. 4425 Nicole Drive Lanham, MD 20706	(301) 459 88 00 (301) 459 28 10 –
	Messtechnik/T & M Equipment: TEKTRONIX Inc. P.O.B. 500, M/S 50-216 Beaverton, OR 97076	(800) 835 9433 Ext. 6630 (800) 835 7732 –
Venezuela	EQUILAB TELECOM C.A. Centro Seguros La Paz Piso 6, Local E-61 Ava. Francisco de Miranda Boleita, Caracas 1070	(2) 34 46 26 (2) 239 52 05 r_ramire@equilabtelecom.com.ve
	Military customers only: REPRESENTACIONES BOPIC S.A. Av. Diego Cisneros Centro Empresarial Los Ruices Of. 119, 1er piso Los Ruices Caracas	(2) 985 21 29 (2) 985 39 94 incotr@cantv.net
Vietnam	Schmidt Vietnam Co., Ltd. 8/F, Schmidt Tower, Hanoi Intern. Technology Centre Cau Giay, Tu Liem, IPO Box 89 Hanoi	(4) 834 61 86 (4) 834 61 88 svnhn@schmidt group.com
Yugoslavia	see/siehe Austria	

Nicht aufgeführte Länder/Countries not listed:

ROHDE & SCHWARZ INTERNATIONAL GmbH
P.O.B. 80 14 69
81614 München / Germany
Please fax to +49 89 41 29 136 62

Supplement to Manual FSE-K20/21

For GSM BTS ANALYZER mode and GSM MS ANALYZER mode, there are demodulation problems (message "sync not found") in firmware V1.95 / V2.10 with the following settings:

Digital Standard: GSM 1800 or GSM 1900

Modulation: EDGE

Therefore measurements for EDGE can not be performed for GSM 1800 and GSM 1900.

For standards P-GSM 900, E-GSM 900 and R-GSM 900 or for all standards with modulation GMSK, these problems do not occur.

Workaround: Select GSM 900 as standard and set frequency manually to the GSM 1800 or GSM 1900 band.
Please note following restrictions:
- Modulation Spectrum measurement is only available for band ARFCN ± 1.8MHz.
- Spurious measurement is not available.

A bug fix will be available at beginning of February 2001.

Contents

1 General Information on Application Firmware FSE-K21, EDGE (8PSK) Measurements 1-1

A Brief Explanation of GSM/EDGE 1-1

Firmware Application FSE-K21 1-5

Installing the FS-K21 Firmware Application 1-6

Starting the Application 1-6

Default Settings of the Application 1-6

Measuring with the Application 1-6

Aborting a Measurement 1-7

Results of Measurements 1-7

Exiting the Application 1-7

Trigger Options 1-8

Trigger and Time References 1-8

Possible Errors and Difficulties During the Measurement 1-9

2 Measurements with the Application Firmware FSE-K21 2-1

Introduction 2-1

Menu Overview 2-2

Switching On the FSE-K21 (EDGE Modes) 2-4

Selecting the Midamble 2-4

Selecting and Editing the Limit Lines 2-6

Measurement of Modulation Accuracy with 8PSK Signals 2-9

Additional Hints 2-13

3 Description of Commands 3-1

Table of Softkeys with IEC/IEEE Comman Assigment 3-13

CONFIGURATION Key Group 3-15

4 Index 4-1

Figures

Fig. 1-1 Data transmission in GSM network - T&FDMA communication 1-2

Fig. 2-1 Conversion of user-defined limit lines 2-7

Fig. 2-4 Measurement of modulation accuracy 2-12

Tables

Table 1-1 Downlink – base station transmitting to mobile 1-3

Table 1-2 Uplink - mobile transmitting to base station 1-3

Table 1-3 Results of measurements 1-7

1 General Information on Application Firmware FSE-K21, EDGE (8PSK) Measurements

The FSE-K21 is an extension to FSE-K11.
This extension enables the measurement of 8-PSK-modulated EDGE signals according to the standards.
The full range of functions of the FSE-K11 is thus also available for EDGE signals.

A Brief Explanation of GSM/EDGE

The GSM standard (Global System for Mobile communication) describes the GSM mobile radio network that is in widespread use today. As an extension to this network, 8PSK has been defined as a new mode of modulation in addition to the existing mode of modulation GMSK. The mode of the mobile or base station based thereupon is called EDGE (Enhanced Data rates for GSM Evolution).

The term GSM thus combines two different modes: GMSK and EDGE. In the following, the term EDGE will be used only if there are significant differences between the two modes. In all other cases, the term GSM will be used.

There are two different standards, distinguished primarily by their frequency bands: ETSI (for GSM900, GSM1800) and J-STD-007 (PCS 1900 , primarily in the USA).

The physical layer – the layer of the GSM network on which modulation, transmission of RF signals, reception of RF signals, and demodulation take place – is defined in the standards.

• GSM 05.04	Modulation
• GSM 05.05 (ETS 300 910)	General measurement specifications and limit values
• GSM 11.10 (ETS 300 607-1)	Detailed measurement specifications and limit values for mobiles
• GSM 11.21 (ETS 300 609-1) and	Detailed measurement specifications and limit values for base stations
• J-STD 007	Detailed measurement specifications and limit values for mobiles and base stations in the 1900-MHz band

As technological development progresses, J-STD 007 is now being integrated into the other GSM standards.

A T&FDMA method is used to transfer data in the GSM network. This means that the digital information is transmitted discretely in the time domain as well as in the frequency domain.

The time domain is divided logically into frames of different length, the smallest unit being known as a timeslot. A multiframe consists of 26 frames, and a frame has 8 timeslots (see GSM 05.01 for details).

A mobile, therefore, does not communicate continuously with the base station; instead, it communicates discretely in individual timeslots. In the simplest case, 8 mobiles share the 8 timeslots of a frame (TDMA - Time Division Multiple Access).

The base station is able to transmit on all the 8 timeslots of a frame.

The frequency domain is divided into frequency bands, and each band, in turn, is subdivided into channels.
Each frequency channel is identified by its center frequency and a number, known as the ARFCN, which is a non-band-specific identifier (ARFCN - absolute radio frequency channel number). A bandwidth of 200 kHz is defined for each frequency channel.

Communication between a mobile and the base station can be either frequency-continuous or frequency-discrete – distributed across various frequency channels (FDMA – Frequency Division Multiple Access). In the standards, the abbreviation "SFH" (slow frequency hopping) is used to designate this mode of communication.

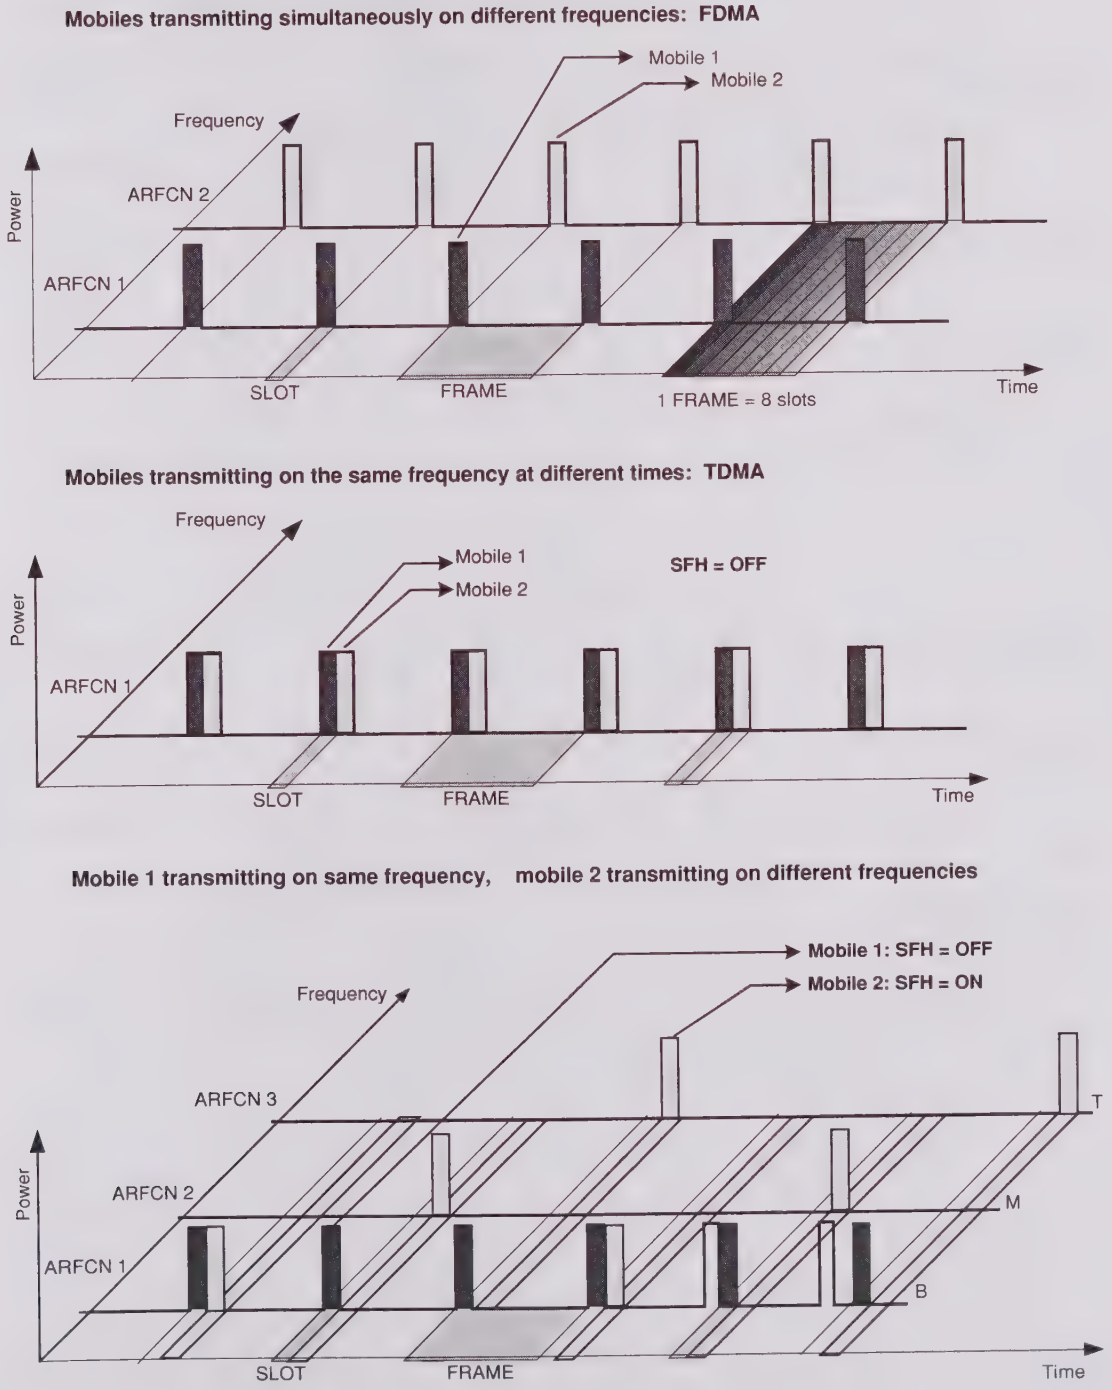

Fig. 1-1 Data transmission in GSM network - T&FDMA communication

Base station and mobile communicate in different frequency ranges. The mobile sends in the "uplink" and the base station in the "downlink".

The frequencies specified in the standards plus their channel numbers are listed in the tables below.

Table 1-1 Downlink – base station transmitting to mobile

P-GSM 900	935.2MHz					959.8MHz	FREQ
	1					124	ARFCN
E-GSM 900	925.2MHz	934.8	935	935.2		959.8MHz	FREQ
	975	1023	0	1		124	ARFCN
R-GSM 900	921.2MHz	934.8	935	935.2		959.8MHz	FREQ
	955	1023	0	1		124	ARFCN
DCS 1800	1805.2MHz					1879.8MHz	FREQ
	512					885	ARFCN
PCS 1900	1930.2MHz					1989.8MHz	FREQ
	512					810	ARFCN

Table 1-2 Uplink - mobile transmitting to base station

P-GSM 900	890.2MHz					914.8MHz	FREQ
	1					124	ARFCN
E-GSM 900	880.2MHz	889.8	890	890.2		914.8MHz	FREQ
	975	1023	0	1		124	ARFCN
R-GSM 900	876.2MHz	889.8	890	890.2		914.8MHz	FREQ
	955	1023	0	1		124	ARFCN
DCS 1800	1710.2MHz					1784.8MHz	FREQ
	512					885	ARFCN
PCS 1900	1850.2MHz					1909.8MHz	FREQ
	512					810	ARFCN

At this time, two different modes of modulation are used in the GSM mobile radio network. The original GMSK method has now been joined by an 8PSK method (EDGE).

The GMSK symbol rate is 1/T = 1625/6 ksymb/s (in other words, approx. 270.833 ksymb/s). This corresponds to 1625/6 kbit/s (in other words approx. 270.833 kbit/s). In this method, a bit change represents a symbol. The details are laid down in ETSI standard GSM 05.04.

The 8PSK (EDGE) symbol rate is 1/T = 1625/6 ksymb/s (in other words, approx. 270.833 ksymb/s). This corresponds to 3 x 1625/6 kbit/s (in other words approx. 812.5 kbit/s).
In this method, three bits represent a symbol. The details are laid down in ETSI standard GSM 05.04.

In both cases, however, the channel bandwidth is restricted to 200 kHz. As these figures show, the EDGE bit rate is approx. three times higher than that of the GMSK method.

The increasing demand for more bandwidth is the reason for the constant development of the GSM standard, as evidenced by the recent introduction of the EDGE specification and the GPRS and HSCSD modes.

So far, each mobile has been able to use only one timeslot per frame, but the new HSCSD and GPRS methods will allow permanent assignment of more than one timeslot per mobile, plus dynamic utilisation of multiple timeslots.

The concept behind GPRS (General Packet Radio Service) is dynamic assignment of up to 8 timeslots to each mobile for data transmission, depending on demand (and availability in the network). Again both modes of modulation (GMSK and 8PSK) can be used.

HSCSD (High Speed Circuit Switched Data) allows permanent assignment of up to 4 timeslots to a mobile. Again both modes of modulation (GMSK and 8PSK) can be used.

Firmware Application FSE-K21

The characteristics of the EDGE systems as outlined above have to be measured in development and production and checked against limit values. The characteristics belonging to the physical layer that have to be checked include:

The characteristics of 8PSK modulation:	Modulation accuracy
Carrier power versus time:	Power, time characteristic of power and timing offset of power within a timeslot are checked.
The spectral characteristics:	The spectral distribution of the energy is measured in the frequency channel, in the transmit band and outside the transmit band. A distinction is made between two causes for the form of spectral distribution: 1) The spectrum caused by GMSK or 8PSK (EDGE) modulation (measurement is performed only in that part of the timeslot in which power is virtually constant, in other words the switching ramps are ignored). 2) The spectrum caused by switching of the power in a timeslot.

In accordance with these requirements, the standards define the six measurements supported in this firmware application.

The FS-K21 application provides a convenient means of performing the measurements listed below for GSM900 (P-GSM, E-GSM and R-GSM), DCS1800 or PCS1900 base stations (according to the standards GSM 05.05, GSM 11.21, J-STD-007 Air Interface):

Characteristics of 8PSK modulation:

- MAC Modulation Accuracy — Measurement of EVM of 95:th-percentile value, of origin offset suppression and frequency error with synchronization to midamble

Carrier power versus time

- CPW Carrier Power — Measurement of carrier power with synchronization to midamble
- PVT Power versus Time — Measurement of carrier power versus time with synchronization to midamble

Spectral characteristics

- MOD Spectrum due to Modulation — Measurement of spectrum due to modulation
- TRA Spectrum due to Transients — Measurement of spectrum due to transients
- SPU Spurious Emissions — Measurement of spurious emissions

The limit values predefined in the standards are automatically set on selection of the standard and can be changed or supplemented.

Extra limit values can be specified for each measurement.

The sections below contain basic information on the main procedures, settings and messages of the device. The descriptions of the measurements in Chapter 2 contain more detailed information specific to the various modes of measurement. The background information in the sections entitled "Additional information" in Chapter 2 is supplementary in nature and not necessary for normal operation. This information merely explains in more detail the internal settings and procedures. Chapter 3 describes the remote-control commands of the application. The relevant commands also accompany each description of a softkey.

Installing the FS-K21 Firmware Application

When shipped ex works, the FS-K21 firmware application is preinstalled and enabled and can be used right away.

When shipped separately, the FSE-K21 firmware application is accompanied by the latest version of the instructions for installation and enabling.

The installation of the FSE-K21 assumes that a firmware version ≥ 1.95/2.10 and Option FSE-K11 have been installed.

Starting the Application

The Application FSE-K21 is an extension to the FSE-K11. Based on the K11, it supports the measurement of EDGE signals. Within the K11, the SETTINGS menu permits to change the mode of modulation to EDGE in the right-hand side menu. Thus, the operating mode EDGE and all limit values and test procedures are preselected according to the standard.

Default Settings of the Application

The basic settings of the parameters required for the measurement are done in the *SETTINGS* menu as with the K11.

For a detailed menu description refer to the FSE-K11 manual.

Measuring with the Application

The measurement procedures as well as the operation are identical to those of the FSE-K11.
As to the range of functions offered, the FSE-K21 differs in that the measurement of the modulation accuracy is performed instead of the phase-frequency-error measurement.

The FSE-K21 also permits to perform reference measurements for correct level setting (to avoid out-of-range values) and for automatic or manual selection of limit lines according to the standard.

Aborting a Measurement

The FSE-K21 provides the same functions as the FSE-K11.

Results of Measurements

Table 1-3 Results of measurements

Measurement	Single value	Limit Line	Table
MAC	EVM peak value EVM RMS value origin offset suppression values 95:th percentile values Frequency error	none	Instantaneous value, Max Hold value, average value, limit value, status of each single value

All other measurements provide the same results as with the FSE-K11.

Exiting the Application

You can exit the application FSE-K21 by calling another operating mode using the Mode key. The functions offered are the same as with the FSE-K11.

Trigger Options

The trigger options are identical to those offered by the FSE-K11.

Trigger and Time References

The trigger and time references of the FSE-K21 are identical to those of the FSE-K11.

Possible Errors and Difficulties During the Measurement

The three main sources of error in GSM measurement are described below:

- **No carrier signal**

Causes:	Wrong working frequency (ARFCN), slow frequency hopping active, test line defective or wrong attenuation, wrong reference level	
Effects:	Reference measurement:	Inadequate power is measured (e.g. average measurement with slow frequency hopping), measurement issues warning. Sweep stops (measurements with midamble synchronization), warning message: Sync not found / Burst not found Sweep stops (measurements with RF Power trigger)
	Main measurement:	Sweep stops with midamble synchronization active (PFE, CPW, PVT) or RF Power trigger in use. Sweep resumes when signal is restored.
Remedy:	- Set correct frequency - Deactivate slow frequency hopping (see "Measurements with Slow Frequency Hopping" in the descriptions of the individual measurements) or switch on SFH in the secondary menu of a measurement (only with TRA and SPU) - Set correct external attenuation (*SETTINGS\EXTERNAL ATTEN)* - Set correct reference level (*SETTINGS \POWER SETTINGS* ...)	

- **No trigger**

Effects:	All triggered measurements:sweep stops. This can be seen from the fact that the trigger LED is not illuminated and does not flash either.
Remedy:	- Change trigger - RF Power trigger: reduce external attenuation increase signal level

- **Burst not found/Sync not found**

Causes:	Dummy burst, slow frequency hopping active, wrong midamble
Effects:	Sweep stops (measurements with midamble synchronization)
Remedy:	Necessary only if measurement does not run, otherwise measurement is possible - Check the midamble - Deactivate slow frequency hopping

2 Measurements with the Application Firmware FSE-K21

Introduction

This section describes the specific differences between the FSE-K21 and the FSE-K11 as to their basic functions. The measurements, settings, menus and procedures not mentioned here are identical to those of the FSE-K11 and described in the FSE-K11 manual.

The following measurements are possible using the application FSE-K21:

- MAC Modulation Accuracy — Measurement of EVM, 95:th percentile, origin offset suppression and frequency error with midamble synchronization
- CPW Carrier Power — Measurement of carrier power with midamble synchronization
- PVT Power versus Time — Measurement of carrier power versus time with midamble synchronization
- MOD Modulation Spectrum — Measurement of modulation spectrum
- TRA Transient Spectrum — Measurement of transient spectrum
- SPU Spurious Emissions — Measurement of spurious emissions

Operation of the FSE-K21 is only possible if the FSE-K11 is installed.

Menu Overview

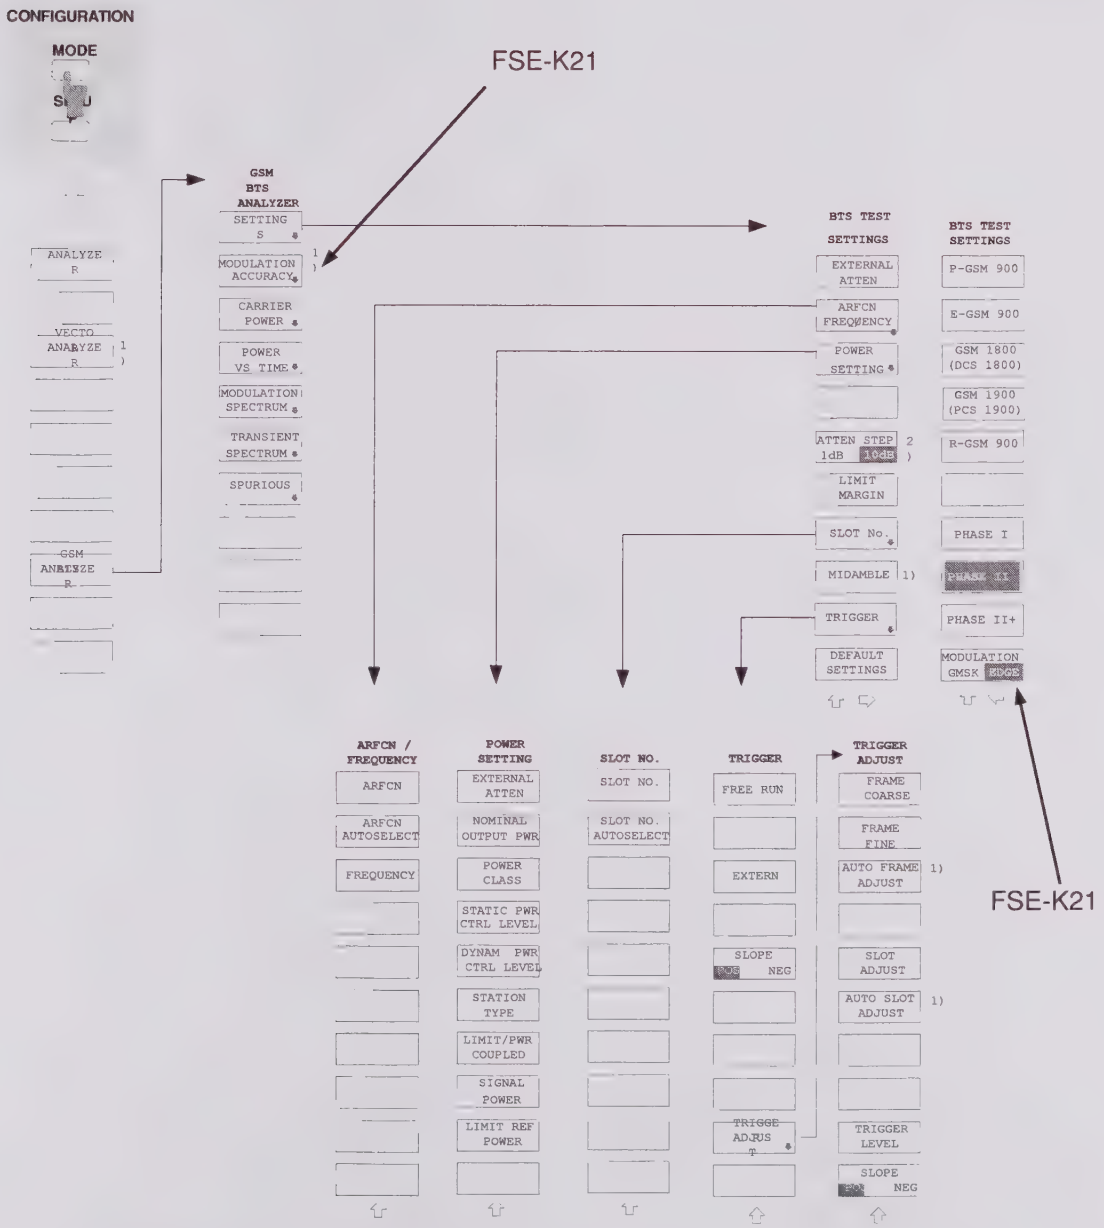

1) only if Option FSE-B7 (Vector Analyzer) is installed
2) only if Option 1-dB Attenuator is installed

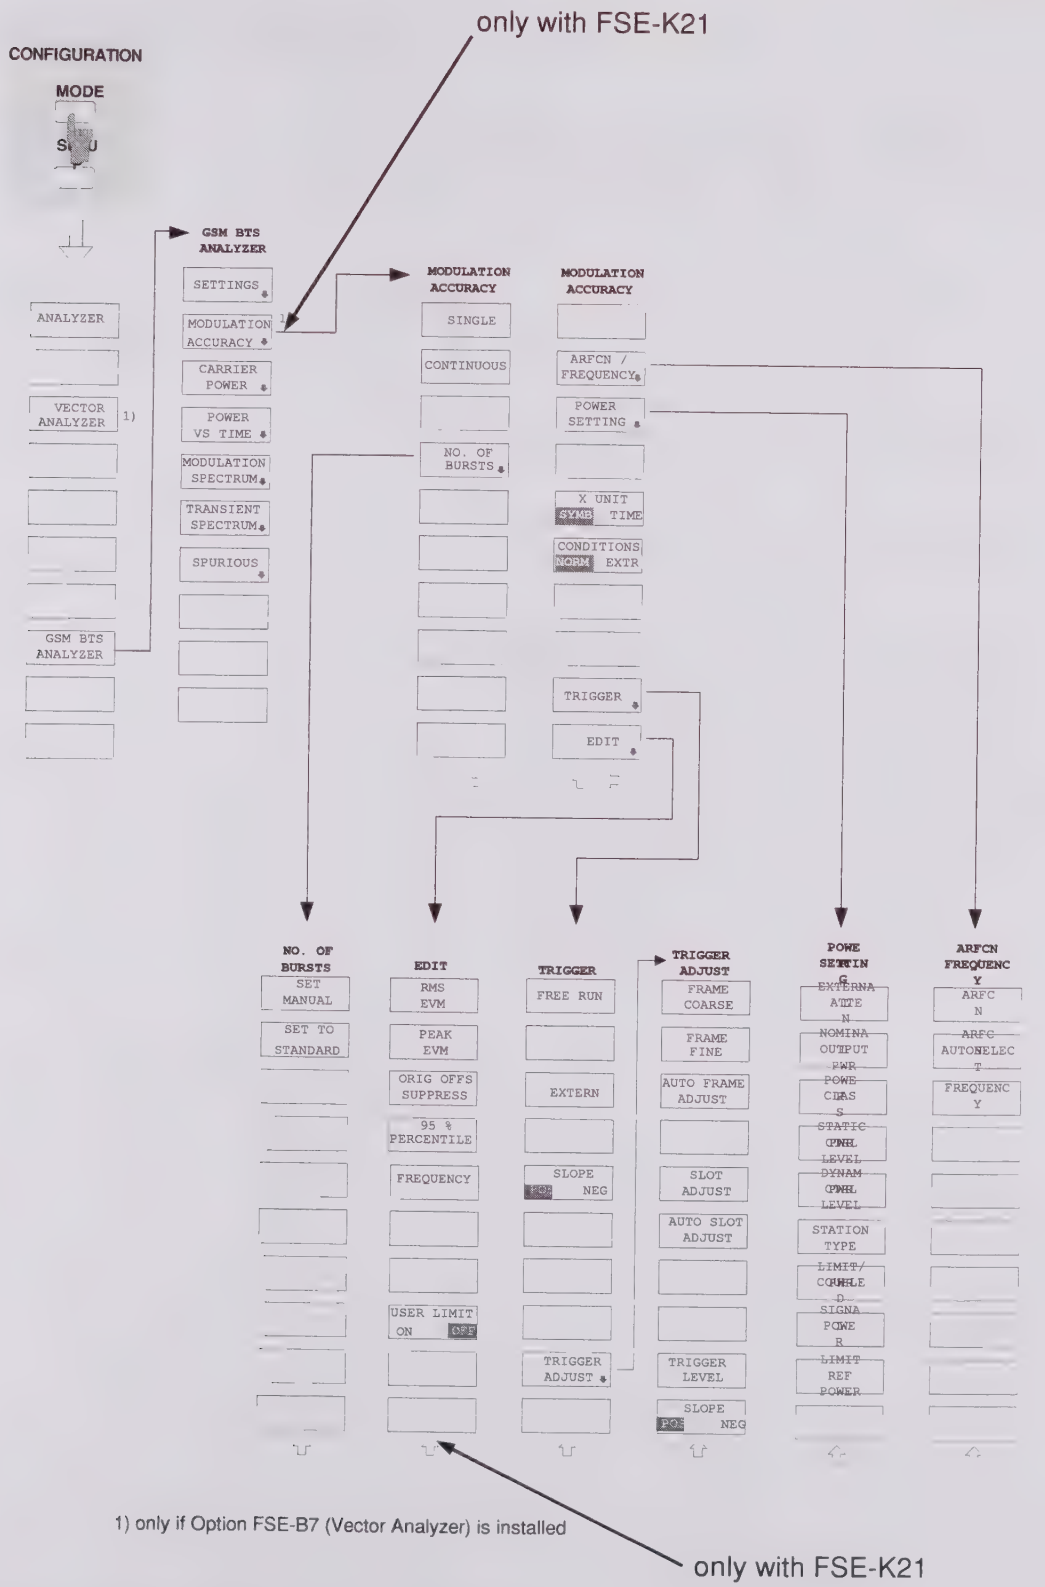

All other menus are identical to those of the FSE-K11.

Switching On the FSE-K21 (EDGE Modes)

The *SETTINGS* softkey calls the submenu for changing the mode of modulation and predefining the test parameters. The associated side menu permits to select the transmission system and the mode of modulation. The parameters to be changed more often like channel, power, midamble etc. are to be found in the main part of the submenu to allow for easy access.

The MODULATION GMSK/EDGE softkey switches the mode of modulation between GMSK and EDGE (8-PSK).

When the standard and the mode of modulation are selected, the FSE/FSIQ uses the settings and limit values specified for the standard for each measurement.

In particular, it is taken into account that in the case of the MAC, CPW, PVT and MOD measurement, the limit values differ depending on the mode of modulation.

For the standards P-GSM 900/Phase 1 the measurement is made to GSM11.20, for DCS 1800 Phase 1 to the ETSI standard GSM 11.20-DCS, for P-GSM 900 and DCS 1800 (Phase 2 each) as well as for E-GSM 900 to the ETSI standard GSM 11.21 and for standard PCS 1900 to US standard J-STD-007 Air Interface. For Phase II+ (in the case of R-GSM and EDGE) the measurement is also made to standards GSM 05.05 and GSM11.21 (also PCS 1900).

Switchover of the phases is identical to that in the FSE-K11. The softkey is disabled for Phase I.

IEC-bus command: `CONF:MTYP EDGE`

Selecting the Midamble

The *MIDAMBLE* softkey opens a table where the EDGE midamble used by the mobile can be selected. The midamble is required for determination of the time reference only if the Option Vector Signal Analysis FSE-B7 is installed. If the option is not installed, the softkey is disabled.

The softkey opens a table which offers all available EDGE midambles for selection.

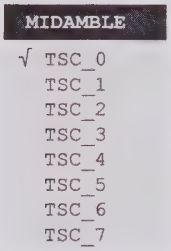

TSC_0 to TSC_7 (Training Sequence Code) represent the training sequences for the normal burst.

The desired midamble can be selected using the cursor keys or the rotary knob and activated using one of the unit keys. The selected midamble is marked by a tick.

IEC-bus command: `CONF[:BTS]:CHAN:TSC 0...7`
`CONF[:BTS]:CHAN:TSC:AUTO ON | OFF`

EDGE midambles:

TSC0	001001 111001001111	001111111111	001001001001	111001001001	111001001111	001111111111
TSC1	001001 111001111111	001111111111	001111111111	111001001001	111001111111	001111111111
TSC2	001111 001001001001	111111111001	111111111001	111001001111	001001001001	111111111001
TSC3	001111 001001001111	111111111001	111111001111	001001001111	001001001111	111111111001
TSC4	001001 001111111001	111001111111	111001001111	001001001001	001111111001	111001111111
TSC5	001111 001001111111	111001111001	111111001001	001001001111	001001111111	111001111001
TSC6	111001 111001001111	111111111111	001111111001	001001111001	111001001111	111111111111
TSC7	111111 111001111111	111111001001	001111001001	111001111111	111001111111	111111001001

Selecting and Editing the Limit Lines

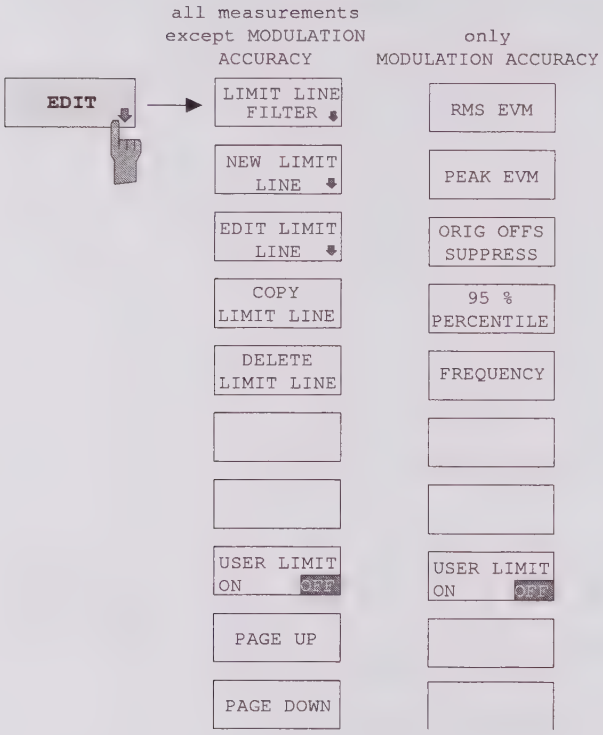

The EDIT softkey opens a submenu for definition and activation of specific limit lines.

The limit lines are edited via the limit-line editor (a function of the basic instrument).

For the modulation accuracy measurement, only the values for RMS EVM, PEAK EVM, ORIG OFFSET SUPPRESSION, 95:th PERCENTILE and FREQUENCY are entered instead of limit lines. Extra softkeys are provided for this purpose.

All the limit lines of the EDGE software FSE-K21 form an integral part of it and are available when the option is enabled. The line names are indicated at the line itself.

To be able to edit the available limit lines, they must be copied from the CD-ROM supplied with the Option FSE-K11 to the device (see supplement to CD-ROM).

A few characteristics of the limit lines of the GSM option cannot be changed manually. These include the exceptions and clipping lines or sockets defined in the standards (... whichever is the highest ...).

These special characteristics are only available in the GSM software.

In the case of limit lines in the time domain, the center of the screen is assigned to the time 0. For defining limit values to the left of the center of the screen negative time values must therefore be entered.

If oblique limit lines are defined by the user, they will be converted into steps in List mode for the measurements Spurious, Spurious Sgl Step, Modulation and Transient as shown by the following illustration:

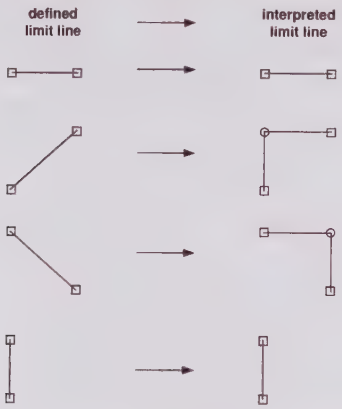

Fig. 2-1 Conversion of user-defined limit lines

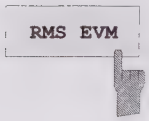

The *RMS EVM* softkey is only provided in the menu for modulation accuracy measurement.

It opens a window in which the limit value for the maximum permissible RMS PEAK value can be entered in percent.

The value entered is indicated in the evaluation table of the modulation accuracy measurement in the LIMIT column when the user-specific limit lines are switched on (*USER LIMIT ON*).

IEC-bus command: `:CONF<1|2>[:BTS]:LIMit:EVMR`

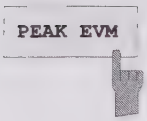

The *PEAK EVM* softkey is only provided in the menu for modulation accuracy measurement.

It opens a window where the limit line for the maximum permissible EVM PEAK value can be entered in percent.

The value entered is indicated in the evaluation table of the modulation accuracy measurement in the LIMIT column when the user-specific limit values are switched on (*USER LIMIT ON*).

IEC-bus command: `:CONF<1|2>[:BTS]:LIMit:EVMP`

The *ORIG OFFS SUPPRESS* softkey is only provided in the menu for modulation accuracy measurement.

It opens a window where the limit value for the maximum permissible ORIGIN OFFSET SUPPRESSION value can be entered in dB.

The value entered is indicated in the evaluation table of the modulation accuracy measurement in the LIMIT column when the user-specific limit values are switched on (*USER LIMIT ON*).

IEC-bus command: `:CONF<1|2>[:BTS]:LIM:OSUP`

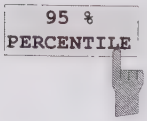

The *95 % PERCENTILE* softkey is only provided in the menu for modulation accuracy measurement.

It opens a window where the limit value for the maximum permissible 95:th percentile value can be entered in percent.

The value entered is indicated in the evaluation table of the modulation accuracy measurement in the LIMIT column when the user-specific limit values are switched on (*USER LIMIT ON*).

IEC-bus command: `:CONF<1|2>[:BTS]:LIM:PERC`

The *FREQUENCY* softkey is only provided in the menu for modulation accuracy measurement.

It opens a window where the limit value for the permissible frequency error (determined over 142 useful symbols) can be entered in ppm.

The value entered is indicated in the evaluation table of the modulation accuracy measurement in the LIMIT column when the user-specific limit values are switched on (*USER LIMIT ON*).

IEC-bus command: `:CONF<1|2>[:BTS]:LIM:FREQ`

All other functions of this menu are identical to those of the FSE-K11.

Measurement of Modulation Accuracy with 8PSK Signals

Note: *Measurement of the modulation accuracy of 8PSK-modulated signals is only possible if the Option FSE-B7 is installed. Otherwise, the softkey will not be offered.*

The modulation accuracy of 8PSK-modulated signals is indicated by the magnitude of the error vector (EVM error vector magnitude).
The error vector EVM is the magnitude of the error vector that connects the measured I and Q value at the complex layer with the ideal I and Q value at the decision points.

The measurement is performed to GSM 05.05 and GSM 11.21, the EVM of each of the 142 specified symbols of a normal burst being determined individually, indicated and compared with the limit values. The RMS value and the peak value of the EVM are evaluated.

The origin offset suppression or the IQ offset are indicated as a measure of carrier suppression. This value is indicated in dB according to the standard.

The 95:th percentile value is a statistical value that indicates the number of EVM values lying below a particular EVM limit value.

The frequency error is calculated from the phase position of the symbols according to the standard and displayed as well.

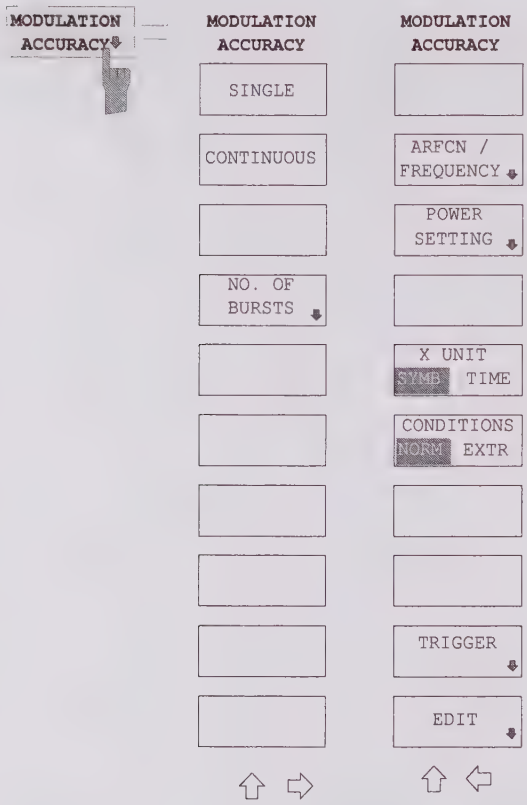

The *MODULATION ACCURACY* softkey opens a submenu for configuration of the measurement of the 8-PSK modulation accuracy according to the selected standard.

The right-hand side menu of this submenu permits to do the main settings – without the need for changing into the *SETTINGS* menu.

Besides, the limit values used can be changed in this submenu (*EDIT* softkey). The settings made using the *EDIT* softkey are local in the respective measurement.

After termination of (and during) the measurement, measuring window A provides a summary of the numerical modulation errors. The error calculation is performed over the 147 useful symbols without tail bits (i.e. over 142 symbols).

- Instantaneous value, Max Hold value and average value of EVM peak value
- Instantaneous value, Max Hold value and average value of EVM RMS value
- Instantaneous value, Max Hold value and average value of origin offset suppression value
- Instantaneous value, Max Hold value and average value of 95:th percentile value
- Max Hold value and average value of frequency error

Measuring window B indicates the EVM versus time, i.e. over the 147 useful symbols of the normal burst. In addition, the range of the 142 symbols is marked by two markers. 3 traces are used for the display:

- Trace No. 1:Clear Write
- Trace No. 2: Max Hold
- Trace No. 3: Min Hold.

The midamble selected in the *SETTING* menu is used for synchronization. For the measurement on DUTs that transmit no midamble refer to the hints below the softkey *NO. OF BURSTS*.

In addition to the values required according to the standard, the value *TRIG TO SYNC START* is displayed. This is the time that passes from the trigger to the first bit of the first symbol of the midamble.

The *SINGLE* softkey triggers a single measurement over the number of bursts entered.

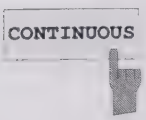

Der Softkey *CONTINUOUS* löst eine ununterbrochene Messung aus, bis eine andere Meßfunktion aufgerufen wird.

The *NO. OF BURSTS* softkey calls a submenu that permits to determine the number of bursts to be taken into account in the measurement.

The *SET MANUAL* softkey permits to set a user-specific number of bursts.
Default setting is 1 burst.

The *SET TO STANDARD* softkey permits to set the number of bursts to the value specified for the currently selected standard.
This is 200 for all standards for the modulation accuracy measurement.

Caution: *With NO OF BURST =1, 142 symbols are always measured and the result displayed in the table after the trigger event has occurred (taking into account the delay set under TRIGGER ADJUST).*

Even measurements for which no midamble or no burst could be found are thus taken into account.

With NO OF BURST>1, errors are determined in those bursts only in which the midamble has been detected correctly

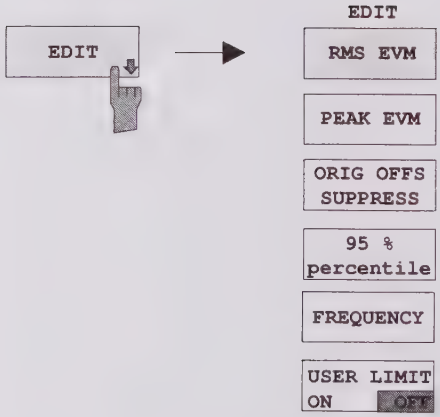

The *EDIT* softkey opens a submenu which permits to specify the limit values to be used in the measurement.

In the input window, the limit values for measurement of the modulation accuracy can be changed via the numeric keypad or the rotary knob of the FSE/FSIQ. The frequency error is entered in "ppm" (parts per million).

Modulation Accuracy

ARFCN: 1 Status: PASSED
Frequency: 935.20000 MHz
Carrier Power: 0.00 dBm Trg to Sync Start: 266.0 µs
Ext. Att/Gain: 0.00 dB
Slot Nr. 0 No. of Bursts: 200

ERRORS	CURRENT	MAX HOLD	AVG	LIMIT	STATUS
RMS EVM	0.58 %	0.85 %	0.57 %	7.00 %	PASSED
PEAK EVM	1.33 %	2.06 %	1.41 %	22.00 %	PASSED
OO SUPPR	51.62 dB	50.45 dB	53.35 dB	35.00 dB	PASSED
95% PERC	1.74 %	1.74 %	1.70 %	11.00 %	PASSED
FREQ	-1.94 Hz	-2.52 Hz	-879.98 mHz	± 46.76 Hz 0.05 ppm	PASSED

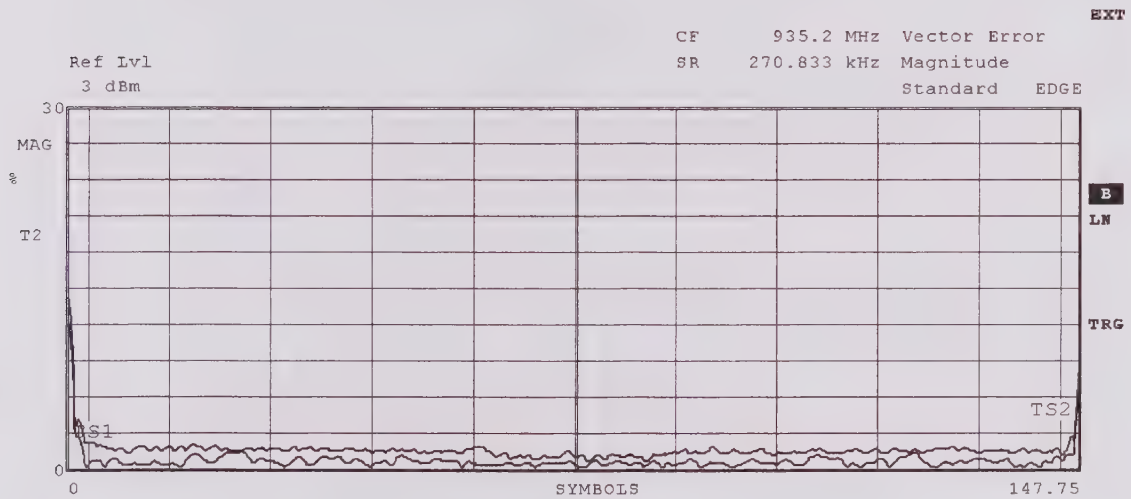

Date: 6.OCT.2000 15:16:59

Fig. 2-4 Measurement of modulation accuracy

Additional Hints

Abbreviations used:	SigPwr	(Expected) signal power, predefined by the current settings for power class and power level.		
	F(ARFCN)	Working frequency, determined by frequency setting		
	ExtAtt	External attenuation		
	NOB	Number Of Bursts – value for the number of sweeps set by the user		
Reference measurement:		None		
Main measurement:		Split Screen, trace at bottom, result display at top; vector mode (i.e.: IQ mode). SingleSweep, ZeroSpan; Center = F(ARFCN);		
		Result:	Max. and average EVM Origin offset suppression 95:th percentile as well as max. frequency error incl. limit values	
		Ttsvr:	EVM over burst characteristic	
	InpAtt	Auto Low Noise (at least -20dBm at mixer)		
	RefLvl	3.0 + SigPwr		
	Display:	Y-Unit PERCENT, 3 %/Div X-Unit SYMBOLS, 148 FullScale Display lines for restriction of the range to be measured with 3 and 145 symbols,		
	VA-Settings:	Memory Size	2048	
		ResultLength	148	
		FrameLength	300	
		Points/Symbol	4	
		SyncOffset	61	
		Find	Sync/Burst	ON/ON
		Meas only if sync'd	OFF/ON	NoOfBursts=1/ NoOfBursts>1
	Trace 1:	MAX/HOLD		
	Trace 2:	Result display		
	Trace 3:	CLEAR/WRITE		
	Trace 4:	MIN/HOLD		
	Triggerdelay:	-100 µs		
	NOB	200		

Limits:

RMS EVM	9 %
PEAK EVM	30 %
ORIGIN OFFSET SUPPR.	30 dB
95 % percentile	15 %

Frequency error	0.0ppm with PICO- BTS 0.5ppm with all other BTS types

3 Description of Commands

CONFigure[:BTS]:MTYPe GMSK | EDGE

This command selects the modulation type (GMSK or EDGE (8PSK)).

Example: "CONF:MTYP EDGE"

Features: **RST value: GMSK
SCPI: device-specific

Mode: BTS

CONFigure:BURSt:MACCuracy:COUNt 1 to 1000

This command sets the number of bursts used for the determination of average and maximum value.

Example: "CONF:BURS:MACC:COUN 100"

Features: *RST value: 500 (GSM/DCS1800 Phase I)
200 otherwise
SCPI: device-specific

Modes: BTS, MS

It is available only in conjunction with option GSM BTS Analyzer FSE-K11 or option GSM MS Analyzer, FSE-K10, and Vector Signal Analysis, FSE-B7.

CONFigure:BURSt:MACCuracy:CONDition NORMal | EXTReme

This command defines the conditions for modulation accuracy measurement.

Example: ":CONF:BURS:MACC:COND EXTR"

Features: *RST value: NORMal
SCPI: device-specific

Modes: BTS, MS

CONFigure:BURSt:POWer[:IMMediate]

This command selects measurement of the average carrier power of the base station or mobile.

Example: "CONF:BURS:POW"

Features: *RST value: --
SCPI: device-specific

Modes: BTS, MS

This command is an event and thus has no query and no *RST value assigned.

CONFigure[:BTS]:LIMit:FREQuency <numeric_value>

This command determines the frequency error limits in ppm for the phase/frequency measurement.

Example: ":CONF:LIM:FREQ 36"

Feature: *RST value: depending on standard
SCPI: device-specific

Mode: BTS

Betriebsart: MS

CONFigure[:BTS]:LIMit:EVMRms<numeric_value>

This command determines the value in percent for the error limits of error vector magnitude measurement with RMS weighting.

Example: "CONF:LIM:EVMR 40"

Features: *RST value depending on the standard
SCPI: device-specific

Mode: BTS

CONFigure[:BTS]:LIMit:EVMPeak<numeric_value>

This command determines the value in percent for the error limits of error vector magnitude measurement with PEAK weighting.

Example: "CONF:LIM:EVMP 30"

Features: *RST value depending on the standard
SCPI: device-specific

Mode: BTS

CONFigure[:BTS]:LIMit:OSUPpress<numeric_value>

This command defines the limit for the origin offset suppression.

Example: "CONF:LIM:OSUP 30"

Features: *RST value depending on the standard
SCPI: device-specific

Mode: BTS

CONFigure[:BTS]:LIMit:PERCentile<numeric_value>

This command determines the 95% percentile limits. The percentile defines the value which the EVM may exceed 5% of all symbols at maximum.

Example: "CONF:LIM:PERC 30"

Features: *RST value depending on the standard
SCPI: device-specific

Mode: BTS

FETCh:BURSt:MACCuracy:RMS:STATus?

This command reads out the status of the RMS measurement of the modulation accuracy taken over the selected number of bursts.

0: failed, 1: passed

Example: "FETC:BURS:MACC:RMS:STAT?"

Features: *RST value: --
SCPI: device-specific

Modes: BTS, MS

If no measurement has been performed yet, a query error results.
This command is a query only and therefore has no *RST value assigned. It is available only if measurement of the modulation accuracy is selected (see CONFigure:BURSt:MACCuracy).

FETCh:BURSt:MACCuracy:RMS:AVERage?

This command reads out the average of the RMS measurement of the modulation accuracy taken over the selected number of bursts.

Example: "FETC:BURS:MACC:RMS:AVER?"

Features: *RST value: --
SCPI: device-specific

Modes: BTS, MS

If no measurement has been performed yet, a query error results.
This command is a query only and therefore has no *RST value assigned. It is available only if measurement of the modulation accuracy is selected (see CONFigure:BURSt:MACCuracy).

FETCh:BURSt:MACCuracy:RMS:MAXimum?

This command reads out the maximum of the RMS measurement of the modulation accuracy taken over the selected number of bursts.

Example: "FETC:BURS:MACC:RMS:MAX?"

Features: *RST value: --
SCPI: device-specific

Modes: BTS, MS

If no measurement has been performed yet, a query error results.
This command is a query only and therefore has no *RST value assigned. It is available only if measurement of the modulation accuracy is selected (see CONFigure:BURSt:MACCuracy).

FETCh:BURSt:MACCuracy:PEAK:STATus?

This command reads out the status of the PEAK measurement of the modulation accuracy taken over the selected number of bursts.

0: failed, 1: passed

Example: "FETC:BURS:MACC:PEAK:STAT?"

Features: *RST value: --
SCPI: device-specific

Modes: BTS, MS

If no measurement has been performed yet, a query error results.
This command is a query only and therefore has no *RST value assigned. It is available only if measurement of the modulation accuracy is selected (see `CONFigure:BURSt:MACCuracy`).

FETCh:BURSt:MACCuracy:PEAK:AVERage?

This command reads out the average of the PEAK measurement of the modulation accuracy taken over the selected number of bursts.

Example: `"FETC:BURS:MACC:PEAK:AVER?"`

Features: *RST value: --
SCPI: device-specific

Modes: BTS, MS

If no measurement has been performed yet, a query error results.
This command is a query only and therefore has no *RST value assigned. It is available only if measurement of the modulation accuracy is selected (see `CONFigure:BURSt:MACCuracy`).

FETCh:BURSt:MACCuracy:PEAK:MAXimum?

This command reads out the maximum of the PEAK measurement of the modulation accuracy taken over the selected number of bursts.

Example: `"FETC:BURS:MACC:PEAK:MAX?"`

Features: *RST value: --
SCPI: device-specific

Modes: BTS, MS

If no measurement has been performed yet, a query error results.
This command is a query only and therefore has no *RST value assigned. It is available only if measurement of the modulation accuracy is selected (see `CONFigure:BURSt:MACCuracy`).

FETCh:BURSt:MACCuracy:OSUPpress:STATus?

This command reads out the status of the original offset supression measurement of the modulation accuracy taken over the selected number of bursts.

0: failed, 1: passed

Example: `"FETC:BURS:MACC:OSUP:STAT?"`

Features: *RST value: --
SCPI: device-specific

Modes: BTS, MS

If no measurement has been performed yet, a query error results.
This command is a query only and therefore has no *RST value assigned. It is available only if measurement of the modulation accuracy is selected (see `CONFigure:BURSt:MACCuracy`).

FETCh:BURSt:MACCuracy:OSUPpress:AVERage?

This command reads out the average of the original offset supression measurement of the modulation accuracy taken over the selected number of bursts.

Example: "FETC:BURS:MACC:OSUP:AVER?"

Features: *RST value: --
SCPI: device-specific

Modes: BTS, MS

If no measurement has been performed yet, a query error results.
This command is a query only and therefore has no *RST value assigned. It is available only if measurement of the modulation accuracy is selected (see CONFigure:BURSt:MACCuracy).

FETCh:BURSt:MACCuracy:OSUPpress:MAXimum?

This command reads out the maximum of the original offset supression measurement of the modulation accuracy taken over the selected number of bursts.

Example: "FETC:BURS:MACC:OSUP:MAX?"

Features: *RST value: --
SCPI: device-specific

Modes: BTS, MS

If no measurement has been performed yet, a query error results.
This command is a query only and therefore has no *RST value assigned. It is available only if measurement of the modulation accuracy is selected (see CONFigure:BURSt:MACCuracy).

FETCh:BURSt:MACCuracy:PERCentile:STATus?

This command reads out the status of the 95% percentile measurement of the modulation accuracy taken over the selected number of bursts.

0: failed, 1: passed

Example: "FETC:BURS:MACC:PERC:STAT?"

Features: *RST value: --
SCPI: device-specific

Modes: BTS, MS

If no measurement has been performed yet, a query error results.
This command is a query only and therefore has no *RST value assigned. It is available only if measurement of the modulation accuracy is selected (see CONFigure:BURSt:MACCuracy).

FETCh:BURSt:MACCuracy:PERCentile:AVERage?

This command reads out the average of the 95% percentile measurement of the modulation accuracy taken over the selected number of bursts.

Example: "FETC:BURS:MACC:PERC:AVER?"

Features: *RST value: --
SCPI: device-specific

Modes: BTS, MS

If no measurement has been performed yet, a query error results.
This command is a query only and therefore has no *RST value assigned. It is available only if measurement of the modulation accuracy is selected (see CONFigure:BURSt:MACCuracy).

FETCh:BURSt:MACCuracy:PERCentile:MAXimum?

This command reads out the maximum of the 95% percentile measurement of the modulation accuracy taken over the selected number of bursts.

Example: "FETC:BURS:MACC:PERC:MAX?"

Features: *RST value: --
SCPI: device-specific

Modes: BTS, MS

If no measurement has been performed yet, a query error results.
This command is a query only and therefore has no *RST value assigned. It is available only if measurement of the modulation accuracy is selected (see CONFigure:BURSt:MACCuracy).

FETCh:BURSt:MACCuracy:FREQuency:STATus?

This command reads out the status of the frequency error measurement of the modulation accuracy taken over the selected number of bursts.

0: failed, 1: passed

Example: "FETC:BURS:MACC:FREQ:STAT?"

Features: *RST value: --
SCPI: device-specific

Modes: BTS, MS

If no measurement has been performed yet, a query error results.
This command is a query only and therefore has no *RST value assigned. It is available only if measurement of the modulation accuracy is selected (see CONFigure:BURSt:MACCuracy).

FETCh:BURSt:MACCuracy:FREQuency:AVERage?

This command reads out the average of the frequency error measurement of the modulation accuracy taken over the selected number of bursts.

Example: "FETC:BURS:MACC:FREQ:AVER?"

Features: *RST value: --
SCPI: device-specific

Modes: BTS, MS

If no measurement has been performed yet, a query error results.
This command is a query only and therefore has no *RST value assigned. It is available only if measurement of the modulation accuracy is selected (see CONFigure:BURSt:MACCuracy).

FETCh:BURSt:MACCuracy:FREQuency:MAXimum?

This command reads out the maximum of the frequency error measurement of the modulation accuracy taken over the selected number of bursts.

Example: "FETC:BURS:MACC:FREQ:MAX?"

Features: *RST value: --
SCPI: device-specific

Modes: BTS, MS

If no measurement has been performed yet, a query error results.
This command is a query only and therefore has no *RST value assigned. It is available only if measurement of the modulation accuracy is selected (see CONFigure:BURSt:MACCuracy).

READ:BURSt:MACCuracy:RMS:STATus?

Mit diesem Befehl wird die Messung der Modulation Accuracy der Basisstation oder des Mobiles ausgelöst und der Status der RMS-Messung über die eingestellte Anzahl von Bursts ausgelesen.

0: failed, 1: passed

Beispiel: "READ:BURS:MACC:RMS:STAT?"

Eigenschaften: *RST-Wert: --
SCPI: gerätespezifisch

Betriebsart: BTS, MS

Mit dem Auslösen der Messung wird automatisch auf Betriebsart SINGLE umgeschaltet.

Eine laufende Messung kann mit dem Befehl ABORt abgebrochen werden. Weitere Ergebnisse der Messung der Modulation Accuracy können anschließend ohne Neustart der Messung über das FETCh:BURSt-Subsystem abgefragt werden.

Er ist nur mit Option GSM BTS Analyzer FSE-K11 oder GSM MS Analyzer FSE-K10 bei Auswahl der Messung der Modulation Accuracy verfügbar (s. CONFigure:BURSt:MACCuracy).

READ:BURSt:MACCuracy:RMS:AVERage?

This command starts the measurement of the modulation accuracy of the base station or mobile and reads out the average of the RMS-measurement taken over the selected number of bursts.

Example: ":READ:BURS:MACC:RMS:AVER?"

Features: *RST value: --
SCPI: device-specific

Modes: BTS, MS

When the measurement is started the instrument automatically assumes the SINGLE mode.

An ongoing measurement can be aborted via the command ABORt. Further results of the modulation accuracy measurement can be then queried without restart of the measurement via the :FETCh:BURSt-subsystem.

This command is a query only and therefore has no *RST value assigned. It is available only if measurement of the modulation accuracy is selected (see :CONFigure:BURSt:MACCuracy).

READ:BURSt:MACCuracy:RMS:MAXimum?

This command starts the measurement of the modulation accuracy of the base station or mobile and reads out the maximum of the RMS-measurement for the selected number of bursts.

Example: ":READ:BURS:MACC:RMS:MAX?"

Features: *RST value: --
SCPI: device-specific

Modes: BTS, MS

When the measurement is started the instrument automatically assumes the SINGLE mode.

An ongoing measurement can be aborted via the command ABORt. Further results of the modulation accuracy measurement can be then queried without restart of the measurement via the :FETCh:BURSt-subsystem.

This command is a query only and therefore has no *RST value assigned. It is available only if measurement of the modulation accuracy is selected (see :CONFigure:BURSt:MACCuracy).

READ:BURSt:MACCuracy:PEAK:STATus?

This command starts the measurement of the modulation accuracy of the base station or mobile and reads out the status of the PEAK-measurement taken over the selected number of bursts.

0: failed, 1: passed

Example: ":READ:BURS:MACC:PEAK:STAT?"

Features: *RST value: --
SCPI: device-specific

Modes: BTS, MS

When the measurement is started the instrument automatically assumes the SINGLE mode.

An ongoing measurement can be aborted via the command ABORt. Further results of the modulation accuracy measurement can be then queried without restart of the measurement via the :FETCh:BURSt-subsystem.

This command is a query only and therefore has no *RST value assigned. It is available only if measurement of the modulation accuracy is selected (see :CONFigure:BURSt:MACCuracy).

READ:BURSt:MACCuracy:PEAK:AVERage?

This command starts the measurement of the modulation accuracy of the base station or mobile and reads out the average of the PEAK-measurement taken over the selected number of bursts.

Example: ":READ:BURS:MACC:PEAK:AVER?"

Features: *RST value: --
SCPI: device-specific

Modes: BTS, MS

When the measurement is started the instrument automatically assumes the SINGLE mode.

An ongoing measurement can be aborted via the command ABORt. Further results of the modulation accuracy measurement can be then queried without restart of the measurement via the :FETCh:BURSt-subsystem.

This command is a query only and therefore has no *RST value assigned. It is available only if measurement of the modulation accuracy is selected (see :CONFigure:BURSt:MACCuracy).

READ:BURSt:MACCuracy:PEAK:MAXimum?

This command starts the measurement of the modulation accuracy of the base station or mobile and reads out the maximum of the PEAK-measurement for the selected number of bursts.

Example: ":READ:BURS:MACC:PEAK:MAX?"

Features: *RST value: --
SCPI: device-specific

Modes: BTS, MS

When the measurement is started the instrument automatically assumes the SINGLE mode.

An ongoing measurement can be aborted via the command ABORt. Further results of the modulation accuracy measurement can be then queried without restart of the measurement via the :FETCh:BURSt-subsystem.

This command is a query only and therefore has no *RST value assigned. It is available only if measurement of the modulation accuracy is selected (see :CONFigure:BURSt:MACCuracy).

:READ:BURSt:MACCuracy:OSUPpress:STATus?

This command starts the measurement of the modulation accuracy of the base station or mobile and reads out the status of the original offset suppression measurement taken over the selected number of bursts.

0: failed, 1: passed

Example: ":READ:BURS:MACC:OSUP:STAT?"

Features: *RST value: --
SCPI: device-specific

Modes: BTS, MS

When the measurement is started the instrument automatically assumes the SINGLE mode.

An ongoing measurement can be aborted via the command ABORt. Further results of the modulation accuracy measurement can be then queried without restart of the measurement via the :FETCh:BURSt-subsystem.

This command is a query only and therefore has no *RST value assigned. It is available only if measurement of the modulation accuracy is selected (see :CONFigure:BURSt:MACCuracy).

READ:BURSt:MACCuracy:OSUPpress:AVERage?

This command starts the measurement of the modulation accuracy of the base station or mobile and reads out the average of the original offset suppression measurement taken over the selected number of bursts.

Example: ":READ:BURS:MACC:OSUP:AVER?"

Features: *RST value: --
SCPI: device-specific

Modes: BTS, MS

When the measurement is started the instrument automatically assumes the SINGLE mode.

An ongoing measurement can be aborted via the command ABORt. Further results of the modulation accuracy measurement can be then queried without restart of the measurement via the :FETCh:BURSt-subsystem.

This command is a query only and therefore has no *RST value assigned. It is available only if measurement of the modulation accuracy is selected (see :CONFigure:BURSt:MACCuracy).

READ:BURSt:MACCuracy:OSUPpress:MAXimum?

This command starts the measurement of the modulation accuracy of the base station or mobile and reads out the maximum of the original offset suppression measurement for the selected number of bursts.

Example: ":READ:BURS:MACC:OSUP:MAX?"

Features: *RST value: --
SCPI: device-specific

Modes: BTS, MS

When the measurement is started the instrument automatically assumes the SINGLE mode.

An ongoing measurement can be aborted via the command ABORt. Further results of the modulation accuracy measurement can be then queried without restart of the measurement via the :FETCh:BURSt-subsystem.

This command is a query only and therefore has no *RST value assigned. It is available only if measurement of the modulation accuracy is selected (see :CONFigure:BURSt:MACCuracy).

READ:BURSt:MACCuracy:PERCentile:STATus?

This command starts the measurement of the modulation accuracy of the base station or mobile and reads out the status of the 95% percentile measurement taken over the selected number of bursts.

0: failed, 1: passed

Example: ":READ:BURS:MACC:PERC:STAT?"

Features: *RST value: --
SCPI: device-specific

Modes: BTS, MS

When the measurement is started the instrument automatically assumes the SINGLE mode.

An ongoing measurement can be aborted via the command ABORt. Further results of the modulation accuracy measurement can be then queried without restart of the measurement via the :FETCh:BURSt-subsystem.

This command is a query only and therefore has no *RST value assigned. It is available only if measurement of the modulation accuracy is selected (see :CONFigure:BURSt:MACCuracy).

READ:BURSt:MACCuracy:PERCentile:AVERage?

This command starts the measurement of the modulation accuracy of the base station or mobile and reads out the average of the 95% percentile measurement taken over the selected number of bursts.

Example: ":READ:BURS:MACC:PERC:AVER?"

Features: *RST value: --
SCPI: device-specific

Modes: BTS, MS

When the measurement is started the instrument automatically assumes the SINGLE mode.

An ongoing measurement can be aborted via the command ABORt. Further results of the modulation accuracy measurement can be then queried without restart of the measurement via the :FETCh:BURSt-subsystem.

This command is a query only and therefore has no *RST value assigned. It is available only if measurement of the modulation accuracy is selected (see :CONFigure:BURSt:MACCuracy).

READ:BURSt:MACCuracy:PERCentile:MAXimum?

This command starts the measurement of the modulation accuracy of the base station or mobile and reads out the maximum of the 95% percentile measurement for the selected number of bursts.

Example: ":READ:BURS:MACC:PERC:MAX?"

Features: *RST value: --
SCPI: device-specific

Modes: BTS, MS

When the measurement is started the instrument automatically assumes the SINGLE mode.

An ongoing measurement can be aborted via the command ABORt. Further results of the modulation accuracy measurement can be then queried without restart of the measurement via the :FETCh:BURSt-subsystem.

This command is a query only and therefore has no *RST value assigned. It is available only if measurement of the modulation accuracy is selected (see :CONFigure:BURSt:MACCuracy).

READ:BURSt:MACCuracy:FREQuency:STATus?

This command starts the measurement of the modulation accuracy of the base station or mobile and reads out the status of the frequency error measurement taken over the selected number of bursts.

0: failed, 1: passed

Example: ":READ:BURS:MACC:FREQ:STAT?"

Features: *RST value: --
SCPI: device-specific

Modes: BTS, MS

When the measurement is started the instrument automatically assumes the SINGLE mode.

An ongoing measurement can be aborted via the command ABORt. Further results of the modulation accuracy measurement can be then queried without restart of the measurement via the :FETCh:BURSt-subsystem.

This command is a query only and therefore has no *RST value assigned. It is available only if measurement of the modulation accuracy is selected (see :CONFigure:BURSt:MACCuracy).

READ:BURSt:MACCuracy:FREQuency:AVERage?

This command starts the measurement of the modulation accuracy of the base station or mobile and reads out the average of the frequency error measurement taken over the selected number of bursts.

Example: ":READ:BURS:MACC:FREQ:AVER?"

Features: *RST value: --
SCPI: device-specific

Modes: BTS, MS

When the measurement is started the instrument automatically assumes the SINGLE mode.

An ongoing measurement can be aborted via the command ABORt. Further results of the modulation accuracy measurement can be then queried without restart of the measurement via the :FETCh:BURSt-subsystem.

This command is a query only and therefore has no *RST value assigned. It is available only if measurement of the modulation accuracy is selected (see :CONFigure:BURSt:MACCuracy).

READ:BURSt:MACCuracy:FREQuency:MAXimum?

This command starts the measurement of the modulation accuracy of the base station or mobile and reads out the maximum of the frequency error measurement for the selected number of bursts.

Example: `":READ:BURS:MACC:FREQ:MAX?"`

Features: *RST value: --
SCPI: device-specific

Modes: BTS, MS

When the measurement is started the instrument automatically assumes the SINGLE mode.

An ongoing measurement can be aborted via the command `ABORt`. Further results of the modulation accuracy measurement can be then queried without restart of the measurement via the `:FETCh:BURSt`-subsystem.

This command is a query only and therefore has no *RST value assigned. It is available only if measurement of the modulation accuracy is selected (see `:CONFigure:BURSt:MACCuracy`).

Table of Softkeys with IEC/IEEE Comman Assigment

MODULATION GMSK EDGE

:CONFigure<1|2>[:MS]:MTYPe GMSK | EDGE

POWER SETTINGS

--

OUTPUT MS POWER

:CONFigure<1|2>[:MS]:POWer:EXPected <num_value> | EG1 | EG2| EG3
EG1, EG1, EG3 nur bei EDGE mit Option K20

MODULATION ACCURACY

:CONFigure<1|2>:BURSt:MACCuracy[:IMMediate]
only with Option K20

SINGLE

:INITiate<1|2>:CONTinuous OFF; :INITiate<1|2>[:IMMediate]
:READ:BURSt:MACCuracy:RMS:STATus
:READ:BURSt:MACCuracy:RMS:AVERage
:READ:BURSt:MACCuracy:RMS:MAXimum
:READ:BURSt:MACCuracy:PEAK:STATus
:READ:BURSt:MACCuracy:PEAK:AVERage
:READ:BURSt:MACCuracy:PEAK:MAXimum
:READ:BURSt:MACCuracy:OSUPpress:STATus
:READ:BURSt:MACCuracy:OSUPpress:AVERage
:READ:BURSt:MACCuracy:OSUPpress:MAXimum
:READ:BURSt:MACCuracy:PERCentile:STATus
:READ:BURSt:MACCuracy:PERCentile:AVERage
:READ:BURSt:MACCuracy:PERCentile:MAXimum
:READ:BURSt:MACCuracy:FREQuency:STATus
:READ:BURSt:MACCuracy:FREQuency:AVERage
:READ:BURSt:MACCuracy:FREQuency:MAXimum

CONTINUOUS

:INITiate<1|2>:CONTinuous ON; :INITiate<1|2>[:IMMediate]
:FETCh:BURSt:MACCuracy:RMS:STATus
:FETCh:BURSt:MACCuracy:RMS:AVERage
:FETCh:BURSt:MACCuracy:RMS:MAXimum
:FETCh:BURSt:MACCuracy:PEAK:STATus
:FETCh:BURSt:MACCuracy:PEAK:AVERage
:FETCh:BURSt:MACCuracy:PEAK:MAXimum
:FETCh:BURSt:MACCuracy:OSUPpress:STATus
:FETCh:BURSt:MACCuracy:OSUPpress:AVERage
:FETCh:BURSt:MACCuracy:OSUPpress:MAXimum
:FETCh:BURSt:MACCuracy:PERCentile:STATus
:FETCh:BURSt:MACCuracy:PERCentile:AVERage
:FETCh:BURSt:MACCuracy:PERCentile:MAXimum
:FETCh:BURSt:MACCuracy:FREQuency:STATus
:FETCh:BURSt:MACCuracy:FREQuency:AVERage
:FETCh:BURSt:MACCuracy:FREQuency:MAXimum

NO. OF BURSTS

SET MANUAL

:CONFigure<1|2>:BURSt:MACCuracy:COUNt <num_value>

SET TO STANDARD

--

ARFCN / FREQUENCY

s. sub menu SETTINGS

POWER SETTINGS	*s. sub menu SETTINGS*
X UNIT SYMB TIME	*:CALCulate<1|2>::X:UNIT:TIME S|SYM*
CONDITIONS NORM EXTR	*:CONFigure<1|2>:BURSt:MACCuracy:CONDitions NORMal | EXTReme*
TRIGGER	*s. sub menu SETTINGS*
EDIT	--
RMS EVM	*:CONFigure<1|2>[:MS]:LIMit:EVMRms <num_value>*
PEAK EVM	*:CONFigure<1|2>[:MS]:LIMit:EVMPeak <num_value>*
ORIG OFFS SUPPRESS	*:CONFigure<1|2>[:MS]:LIMit:OSUPpress <num_value>*
95% PERCENTILE	*:CONFigure<1|2>[:MS]:LIMit:PERCentile <num_value>*
FREQUENCY	*:CONFigure<1|2>[:MS]:LIMit:FREQuency <num_value>*
USER LIMIT ON OFF	*:CONFigure<1|2>[:MS]:LIMit:STANdard ON | OFF*

CONFIGURATION Key Group

MODE	
GSM BTS ANALYZER	:INSTrument<1|2>[:SELect] BGSM
SETTINGS	--
EXTERNAL ATTEN	:[SENSe<1|2>:]CORRection:LOSS:INPut[:MAGNitude] <num_value>
ARFCN / FREQUENCY	--
ARFCN	CONFigure[:BTS]:ARFCn <num_value>
ARFCN AUTOSELECT	CONFigure[:BTS]:ARFCn:AUTO ONCE
FREQUENCY	SENSe<1|2>:FREQuency:CENTer <num_value>
POWER SETTINGS	--
EXTERNAL ATTEN	SENSe<1|2>:CORRection:LOSS:INPut[:MAGNitude] <num_value>
NOMINAL OUTPUT PWR	CONFigure[:BTS]:POWer:EXPected <num_value>
POWER CLASS	CONFigure[:BTS]:POWer:CLASs <num_value> | M1 | M2 | M3 | P1
STATIC PWR CTRL LEVEL	CONFigure[:BTS]:POWer:STATic <num_value>
DYNAM PWR CTRL LEVEL	CONFigure[:BTS]:POWer:DYNamic <num_value>
STATION TYPE	CONFigure[:BTS]:STYPe NORMal | MICRo | PICO
LIMIT/PWR COUPLED	CONFigure[:BTS]:POWer:COUPled ON | OFF
SIGNAL POWER	CONFigure[:BTS]:POWer:EXPected <num_value>
LIMIT LINE REF POWER	CONFigure[:BTS]:POWer:LIMit <num_value>
LIMIT MARGIN	:CALCulate<1|2>:LIMit<1...8>:MARGin <num_value>
SLOT NO.	--
SLOT NO.	CONFigure[:BTS]:CHANnel:SLOT 0...7
SLOT NO. AUTOSELECT	CONFigure[:BTS]:CHANnel:SLOT:AUTO ONCE

MIDAMBLE	CONFigure[:BTS]:CHANnel:TSC 0...7 CONFigure[:BTS]:CHANnel:TSC:AUTO ON | OFF
TRIGGER	--
FREE RUN	:TRIGger<1|2>[:SEQuence]:SOURce IMMediate
EXTERN	:TRIGger<1|2>[:SEQuence]:SOURce EXTernal :TRIGger<1|2>[:SEQuence]:LEVel[:EXTernal] -5.0...+5.0V
SLOPE POS NEG	:TRIGger<1|2>[:SEQuence]:SLOPe POSitive|NEGative
TRIGGER ADJUST	--
FRAME COARSE	:TRIGger<1|2>[:SEQuence]:SYNChronize:ADJust:FRAMe <num_value>
FRAME FINE	:TRIGger<1|2>[:SEQuence]:SYNChronize:ADJust:FRAMe <num_value>
AUTO FRAME ADJUST	:TRIGger<1|2>[:SEQuence]:SYNChronize:ADJust:FRAMe:AUTO ONCE
SLOT ADJUST	:TRIGger<1|2>[:SEQuence]:SYNChronize:ADJust:SLOT <num_value>
AUTO SLOT ADJUST	:TRIGger<1|2>[:SEQuence]:SYNChronize:ADJust:SLOT:AUTO ONCE
TRIGGER LEVEL	:TRIGger<1|2>[:SEQuence]:LEVel[:EXTernal] <num_value>
SLOPE POS NEG	:TRIGger<1|2>[:SEQuence]:SLOPe POSitive|NEGative
DEFAULT SETTINGS	CONFigure[:BTS]:PRESet
P-GSM 900	CONFigure[:BTS]:NETWork[:TYPE] PGSM | PGSM900
GSM 1800 (DCS 1800)	CONFigure[:BTS]:NETWork[:TYPE] DCS | GSM1800
GSM 1900 (PCS 1900)	CONFigure[:BTS]:NETWork[:TYPE] PCS | GSM1900
R-GSM 900	CONFigure[:BTS]:NETWork[:TYPE] RGSM | RGSM900
R-GSM 900	CONFigure[:BTS]:NETWork[:TYPE] RGSM
PHASE I	CONFigure[:BTS]:NETWork:PHASe 1
PHASE II	CONFigure[:BTS]:NETWork:PHASe 2
PHASE II+	CONFigure[:BTS]:NETWork:PHASe 2,PLUS
MODULATION GMSK EDGE	:CONFigure<1|2>[:MS]:MTYPe GMSK | EDGE only with Option K21

PHASE/FREQ ERROR	*CONFigure:BURSt:PFERror[:IMMediate]*
SINGLE	*:INITiate<1|2>:CONTinuous OFF; :INITiate<1|2>[:IMMediate]* *:READ:BURSt:PERRor:RMS:STATus?* *:READ:BURSt:PERRor:RMS:AVERage?* *:READ:BURSt:PERRor:RMS:MAXimum?* *:READ:BURSt:PERRor:PEAK:STATus?* *:READ:BURSt:PERRor:PEAK:AVERage?* *:READ:BURSt:PERRor:PEAK:MAXimum?* *:READ:BURSt:FERRor:STATus?* *:READ:BURSt:FERRor:AVERage?* *:READ:BURSt:FERRor:MAXimum?*
CONTINUOUS	*:INITiate<1|2>:CONTinuous ON; :INITiate<1|2>[:IMMediate]* *:FETCh:BURSt:PERRor:RMS:STATus?* *:FETCh:BURSt:PERRor:RMS:AVERage?* *:FETCh:BURSt:PERRor:RMS:MAXimum?* *:FETCh:BURSt:PERRor:PEAK:STATus?* *:FETCh:BURSt:PERRor:PEAK:AVERage?* *:FETCh:BURSt:PERRor:PEAK:MAXimum?* *:FETCh:BURSt:FERRor:STATus?* *:FETCh:BURSt:FERRor:AVERage?* *:FETCh:BURSt:FERRor:MAXimum?*
NO. OF BURSTS	--
SET MANUAL	*:CONFigure<1|2>:BURSt:PFERror:COUNt <num_value>*
SET TO STANDARD	--
ARFCN / FREQUENCY	*s. sub menu SETTINGS*
POWER SETTINGS	*s. sub menu SETTINGS*
X UNIT SYMB TIME	*:CALCulate<1|2>:X:UNIT:TIME S|SYM*
CONDITIONS NORM EXTR	*:CONFigure<1|2>:BURSt:PFERror:CONDitions NORMal | EXTReme*
TRIGGER	*s. sub menu SETTINGS*
EDIT	--
PHASE PEAK	*:CONFigure<1|2>[:BTS]:LIMit:PPEak <num_value>*
PHASE RMS	*:CONFigure<1|2>[:BTS]:LIMit:PRMS <num_value>*
FREQUENCY	*:CONFigure<1|2>[:BTS]:LIMit:FREQuency <num_value>*
USER LIMIT ON OFF	*:CONFigure<1|2>[:BTS]:LIMit:STANdard ON | OFF*
MODULATION ACCURACY	*:CONFigure<1|2>:BURSt:MACCuracy[:IMMediate]* *only with Option K14*

SINGLE	:INITiate<1|2>:CONTinuous OFF; :INITiate<1|2>[:IMMediate] :READ:BURSt:MACCuracy:RMS:STATus :READ:BURSt:MACCuracy:RMS:AVERage :READ:BURSt:MACCuracy:RMS:MAXimum :READ:BURSt:MACCuracy:PEAK:STATus :READ:BURSt:MACCuracy:PEAK:AVERage :READ:BURSt:MACCuracy:PEAK:MAXimum :READ:BURSt:MACCuracy:OSUPpress:STATus :READ:BURSt:MACCuracy:OSUPpress:AVERage :READ:BURSt:MACCuracy:OSUPpress:MAXimum :READ:BURSt:MACCuracy:PERCentile:STATus :READ:BURSt:MACCuracy:PERCentile:AVERage :READ:BURSt:MACCuracy:PERCentile:MAXimum :READ:BURSt:MACCuracy:FREQuency:STATus :READ:BURSt:MACCuracy:FREQuency:AVERage :READ:BURSt:MACCuracy:FREQuency:MAXimum
CONTINUOUS	:INITiate<1|2>:CONTinuous ON; :INITiate<1|2>[:IMMediate] :FETCh:BURSt:MACCuracy:RMS:STATus :FETCh:BURSt:MACCuracy:RMS:AVERage :FETCh:BURSt:MACCuracy:RMS:MAXimum :FETCh:BURSt:MACCuracy:PEAK:STATus :FETCh:BURSt:MACCuracy:PEAK:AVERage :FETCh:BURSt:MACCuracy:PEAK:MAXimum :FETCh:BURSt:MACCuracy:OSUPpress:STATus :FETCh:BURSt:MACCuracy:OSUPpress:AVERage :FETCh:BURSt:MACCuracy:OSUPpress:MAXimum :FETCh:BURSt:MACCuracy:PERCentile:STATus :FETCh:BURSt:MACCuracy:PERCentile:AVERage :FETCh:BURSt:MACCuracy:PERCentile:MAXimum :FETCh:BURSt:MACCuracy:FREQuency:STATus :FETCh:BURSt:MACCuracy:FREQuency:AVERage :FETCh:BURSt:MACCuracy:FREQuency:MAXimum
NO. OF BURSTS	
SET MANUAL	:CONFigure<1|2>:BURSt:MACCuracy:COUNt <num_value>
SET TO STANDARD	--
ARFCN / FREQUENCY	*s. sub menu SETTINGS*
POWER SETTINGS	*s. sub menu SETTINGS*
X UNIT SYMB TIME	:CALCulate<1|2>::X:UNIT:TIME S|SYM
CONDITIONS NORM EXTR	:CONFigure<1|2>:BURSt:MACCuracy:CONDitions NORMal | EXTReme
TRIGGER	*s. sub menu SETTINGS*
EDIT	--
RMS EVM	:CONFigure<1|2>[:BTS]:LIMit:EVMRms <num_value>

PEAK EVM	:CONFigure<1|2>[:BTS]:LIMit:EVMPeak <num_value>
ORIG OFFS SUPPRESS	:CONFigure<1|2>[:BTS]:LIMit:OSUPpress <num_value>
95% PERCENTILE	:CONFigure<1|2>[:BTS]:LIMit:PERCentile <num_value>
FREQUENCY	:CONFigure<1|2>[:BTS]:LIMit:FREQuency <num_value>
USER LIMIT ON OFF	:CONFigure<1|2>[:BTS]:LIMit:STANdard ON | OFF
CARRIER POWER	:CONFigure<1|2>:BURSt:POWer[:IMMediate] :CALCulate<1|2>:LIMit:BURSt:POWer?
MEAS MAX OUTPUT PWR	:READ:BURSt:POWer?
INC STATIC PWR CTRL	:READ:BURSt:POWer:STATic?
INC DYNAM PWR CTRL	:READ:BURSt:POWer:DYNamic?
NO. OF BURSTS	--
SET MANUAL	:CONFigure<1|2>:BURSt:POWer:COUNt <num_value>
SET TO STANDARD	--
SGL MEAS ON OFF	:CONFigure<1|2>[:BTS]:POWer:SINGle[:STATe] ON | OFF
MEAS SGL PWR LEVEL	:READ:BURSt:POWer?
STATIC PWR CTRL LEVEL	:CONFigure<1|2>[:BTS]:POWer:STATic <num_value>
DYNAM PWR CTRL LEVEL	:CONFigure<1|2>[:BTS]:POWer:DYNamic <num_value>
CLEAR SGL RESULT TAB	:CONFigure<1|2>[:BTS]:POWer:SINGle:CLEar
SIGNAL POWER	:CONFigure<1|2>[:BTS]:POWer:EXPected <num_value>
ARFCN / FREQUENCY	*s. sub menu SETTINGS*
POWER SETTINGS	*s. sub menu SETTINGS*
CONDITIONS NORM EXTR	:CONFigure<1|2>:BURSt:POWer:CONDition NORMal | EXTReme
MEAS BANDWIDTH	:[SENSe<1|2>:]BANDwidth|BWIDth[:RESolution] DEF | 300kHz | 1MHz
SYNC TO MIDAMBLE	:TRIGger<1|2>[:SEQuence]:SYNChronize:SOURce FRAMe | TSC

TRIGGER	*s. sub menu SETTINGS*
POWER VS TIME	*:CONFigure<1|2>:BURSt:PTEMplate[:IMMediate]* *:CALCulate<1|2>:LIMit:BURSt:PTEMplate?*
SINGLE	*:INITiate<1|2>:CONTinuous OFF; :INITiate<1|2>[:IMMediate]*
CONTINUOUS	*:INITiate<1|2>:CONTinuous ON; :INITiate<1|2>[:IMMediate]*
BURST HIGH RESOLUTION	*:CONFigure<1|2>:BURSt:PTEMplate:SELect TOP*
NO. OF BURSTS	--
SET MANUAL	*:CONFigure<1|2>:BURSt:PTEMplate:COUNt <num_value>*
SET TO STANDARD	--
FULL BURST	*:CONFigure<1|2>:BURSt:PTEMplate:SELect FULL*
RISING EDGE	*:CONFigure<1|2>:BURSt:PTEMplate:SELect RISing*
FALLING EDGE	*:CONFigure<1|2>:BURSt:PTEMplate:SELect FALLing*
START REF MEAS	*:READ:BURSt:REFerence[:IMMediate]?*
REF MEAS AUTO USER	*:CONFigure<1|2>:BURSt:REFerence:AUTO ON | OFF*
ARFCN / FREQUENCY	*s. sub menu SETTINGS*
POWER SETTINGS	*s. sub menu SETTINGS*
X UNIT SYMB TIME	*CALCulate:X:UNIT:TIME S|SYM*
MEAS BANDWIDTH	*:[SENSe<1|2>:]BANDwidth|BWIDth[:RESolution] DEF | 300 kHz | 1 MHz*
SYNC TO MIDAMBLE	*:TRIGger<1|2>[:SEQuence]:SYNChronize:SOURce FRAMe | TSC*
TRIGGER	*s. sub menu SETTINGS*
EDIT	--
LIMIT LINE FILTER	--
NEW LIMIT LINE	*s. basic instrument*
EDIT LIMIT LINE	*s. basic instrument*

COPY LIMIT LINE	*s. basic instrument*
DELETE LIMIT LINE	*s. basic instrument*
USER LIMIT ON OFF	*:CONFigure<1|2>[:BTS]:LIMit:STANdard ON | OFF*
PAGE UP	--
PAGE DOWN	--
MODULATION SPECTRUM	*:CONFigure<1|2>:SPECtrum:MODulation[:IMMediate]* *:CALCulate<1|2>:LIMit:SPECtrum:MODulation?* *ARFCn|TXBand|RXBand|COMBined* *:CALCulate<1|2>:LIMit:SPECtrum:MODulation:FAILs?* *:CALCulate<1|2>:LIMit:SPECtrum:MODulation:EXCeptions?*
SINGLE FREQ SWEEP	*:INITiate<1|2>:CONTinuous OFF; :INITiate<1|2>[:IMMediate]*
CONTINUOUS FREQ SWEEP	*:INITiate<1|2>:CONTinuous ON; :INITiate<1|2>[:IMMediate]*
START LIST	*:READ:SPECtrum:MODulation[:ALL]?*
NO. OF BURSTS	--
SET MANUAL	*:CONFigure<1|2>:SPECtrum:MODulation:COUNt <num_value>*
SET TO STANDARD	--
ARFCN ±1.8 MHZ	*:CONFigure<1|2>:SPECtrum:MODulation:RANGe ARFCn*
TX BAND	*:CONFigure<1|2>:SPECtrum:MODulation:RANGe TXBand*
±1.8 MHZ / TX BAND	*:CONFigure<1|2>:SPECtrum:MODulation:RANGe COMBined*
RX BAND	*:CONFigure<1|2>:SPECtrum:MODulation:RANGe RXBand*
ARFCN / FREQUENCY	*s. sub menu SETTINGS*
POWER SETTINGS	*s. sub menu SETTINGS*
RX BAND GAIN	*:[SENSe<1|2>:]CORRection:RXGain:INPut[:MAGNitude] <num_value>*
TX GATE ON OFF	*:CONFigure<1|2>:SPECtrum:MODulation:TGATe ON | OFF*
TRIGGER	*s. sub menu SETTINGS*

EDIT	--
LIMIT LINE FILTER	--
NEW LIMIT LINE	*s. basic instrument*
EDIT LIMIT LINE	*s. basic instrument*
COPY LIMIT LINE	*s. basic instrument*
DELETE LIMIT LINE	*s. basic instrument*
USER LIMIT ON OFF	*:CONFigure<1|2>[:BTS]:LIMit:STANdard ON | OFF*
PAGE UP	--
PAGE DOWN	--
TRANSIENT SPECTRUM	*:CONFigure<1|2>:SPECtrum:SWITching[:IMMediate]* *:CALCulate<1|2>:LIMit:SPECtrum:SWITching?* *:CALCulate<1|2>:LIMit:SPECtrum:SWITching:FAILs?*
SINGLE FREQ SWEEP	*:INITiate<1|2>:CONTinuous OFF; :INITiate<1|2>[:IMMediate]*
CONTINUOUS FREQ SWEEP	*:INITiate<1|2>:CONTinuous ON; :INITiate<1|2>[:IMMediate]*
START LIST	*:READ:SPECtrum:SWITching[:ALL]?*
NO. OF BURSTS	--
SET MANUAL	*:CONFigure<1|2>:SPECtrum:SWITching:COUNt <num_value>*
SET TO STANDARD	--
ARFCN / FREQUENCY	*s. sub menu SETTINGS*
POWER SETTINGS	*s. sub menu SETTINGS*
BTS SFH ON OFF	*:CONFigure<1|2>[:BTS]:CHANnel:SFH ON | OFF*
MEAS BANDWIDTH	*:[SENSe<1|2>:]BANDwidth|BWIDth[:RESolution] DEF | 300kHz | 1MHz*
TRIGGER	*s. sub menu SETTINGS*
EDIT	--
LIMIT LINE FILTER	--

NEW LIMIT LINE	*s. basic instrument*
EDIT LIMIT LINE	*s. basic instrument*
COPY LIMIT LINE	*s. basic instrument*
DELETE LIMIT LINE	*s. basic instrument*
USER LIMIT ON OFF	*:CONFigure<1|2>[:BTS]:LIMit:STANdard ON | OFF*
PAGE UP	--
PAGE DOWN	--
SPURIOUS	*:CONFigure<1|2>:SPURious[:IMMediate]* *:CALCulate<1|2>:LIMit:SPURious? TXBand | OTXBand | RXBand* *:CALCulate<1|2>:LIMit:SPURious:FAILs? TXBand | OTXBand | RXBand*
START LIST SGL STEP	*ABORT;:READ:SPURious:STEP?*
CONT LIST SGL STEP	*:READ:SPURious:STEP?*
START LIST	*:READ:SPURious [:ALL]?*
SWEEP COUNT	--
SWP COUNT TX / <> TX	*:CONFigure<1|2>:SPURious:COUNt <num_value>*
SWP COUNT RX BAND	*:CONFigure<1|2>:SPURious:COUNt:RXBand <num_value>*
SET TO STANDARD	--
TX BAND	*:CONFigure<1|2>:SPURious:RANGe TXBand*
<> TX BAND	*:CONFigure<1|2>:SPURious:RANGe OTXBand*
RX BAND	*:CONFigure<1|2>:SPURious:RANGe RXBand*
TX BAND ±2.MHZ	*:CONFigure<1|2>:SPURious:RANGe COMBined*
SELECT STEP	*:CONFigure<1|2>:SPURious:STEP:COUNT?* *:CONFigure<1|2>:SPURious:STEP<1..26> ON | OFF*
ARFCN / FREQUENCY	*s. sub menu SETTINGS*
POWER SETTINGS	*s. sub menu SETTINGS*

BTS SFH ON OFF	*:CONFigure<1|2>[:BTS]:CHANnel:SFH ON | OFF*
TX SUPPR ON OFF	*:CONFigure<1|2>[:BTS]:TXSupp ON | OFF*
RX BAND GAIN	*:[SENSe<1|2>:]CORRection:RXGain:INPut[:MAGNitude] <num_value>*
COSITING	*:CONFigure<1|2>[:BTS]:COSiting ON | OFF*
SWEEPTIME STD AUTO	*:CONFigure<1|2>[:BTS]:SWEeptime STANdard|AUTO*
TRIGGER	*s. sub menu SETTINGS*
EDIT	--
LIMIT LINE FILTER	--
NEW LIMIT LINE	*s. basic instrument*
EDIT LIMIT LINE	*s. basic instrument (units DB | DBM)*
COPY LIMIT LINE	*s. basic instrument*
DELETE LIMIT LINE	*s. basic instrument*
USER LIMIT ON OFF	*:CONFigure<1|2>[:BTS]:LIMit:STANdard ON | OFF*
PAGE UP	--
PAGE DOWN	--

4 Index

A

ARFCN 1-1

B

Burst not found 1-10

C

Carrier signal, not detected 1-10

D

Downlink 1-3

E

EDGE 1-4
Enabling 1-6
Exiting the application 1-8

F

FDMA 1-2
Frequency error 2-10

G

GPRS 1-4

H

HSCSD 1-4

I

Installation 1-6

M

Measurements
  aborting 1-7
  results 1-7

P

Phase/frequency error 2-10

R

Results of measurements 1-7

S

Softkey
  CONTINUOUS 2-12
  EDIT 2-7
  FREQUENCY 2-9
  MIDAMBLE 2-6
  NO. OF BURSTS 2-13
  PHASE PEAK 2-8, 2-9
  PHASE/FREQ ERROR 2-11
  SET MANUAL 2-13
  SET TO STANDARD 2-13
  SETTINGS 2-4
  SINGLE 2-12
Standard 2-4
standards 1-1
Starting the application 1-6
Sync not found 1-10

T

TDMA 1-1
Test parameter 2-4
Training sequence 2-6
Transmission system 2-4
Trigger
  not detected 1-10
Trigger and Time References 1-9
TSC (Training Sequence Code) 2-6

U

Uplink 1-3